

ASSEMBLY, INSTALLATION AND SERVICING MANUAL

ColdAIR WA & RA EVAPORATIVE COOLERS

INDEX

Section

Introduction and Document Index	
Technical Information -----	1
Dimensions -----	2
Packaging, Handling and Transportation -----	3
Installation -----	4
Health and Safety-----	5
User and Operating Instructions -----	6
Maintenance-----	7
Dismantling -----	8

WARNINGS

AmbiRad equipment must be installed and maintained in accordance with any relevant obligations arising from the Health and Safety at Work Act 1974 or relevant codes of practice. In addition the installation must be carried out in accordance with the current IEE wiring regulations (BS 7671) and any other relevant British Standards and Codes of Practice by a qualified installer.

All external wiring MUST comply with the current IEE wiring regulations.

Part No. 703500

Document Index.

GENERAL INFORMATION	4
User Information	4
SECTION 1 – TECHNICAL INFORMATION	4
1.1 Machine identification data	4
1.2 Introduction	4
1.3 Technical information	5
1.4 Warnings	6
1.5 Control Panels	6
1.6 Improper use	6
SECTION 2 – DIMENSIONS	7
2.1 RA100	7
2.2 RA200	7
2.3 RC100	8
2.4 RC200	8
2.5 WA100/150	9
SECTION 3 – PACKAGING, HANDLING AND TRANSPORTATION	9
3.1 Delivery of the unit	9
3.2 Handling and transportation	9
3.3 Lifting	10
3.3.1 Lifting with fork lift	12
3.3.2 Lifting with cables	12
3.4 Unpacking the equipment	10
3.5 Storage	10
SECTION 4 – INSTALLATION	11
4.1 General Warnings WA evaporative cooling units	11
4.2 Positioning and Installation of the WA evaporative cooling units	11
4.2.1 Wall installation	11
4.2.2 Window installation	11
4.3 General Warnings RA/RC evaporative cooling units	12
4.4 Positioning and Installation of the RA/RC evaporative cooling units	12
4.4.1 RA roof installation	12
4.4.2 RC roof installation	14
4.4.3 RC wall window installation	15
4.4.4 RA wall window installation	15
4.5 Installation	16
4.6 Connection to the power supply	16
4.7 Wiring diagrams	17
4.7.1 Control panel with Temperature probe	17
4.7.2 Schematic wiring RA150	18
4.7.3 Schematic wiring RA200	18
4.7.4 Schematic wiring RC100	19
4.7.5 Schematic wiring RC200	20
4.7.6 Multiple coolers	21
4.7.7 Multiple coolers via Router	22
4.7.8 Multiple coolers via two Routers	23
4.8 Connection to the water supply	24
SECTION 5 – HEALTH AND SAFETY	24
5.1 Protection devices	24
5.2 Clothing	24
5.3 Residual risks	24
5.4 Emergency situations	24

SECTION 6 – USER INSTRUCTIONS	25
6.1 General.....	25
6.2 First start-up	25
6.3 Remote Command Unit.....	26
6.3.1 Command and signal descriptions.....	26
6.3.1.1 Command descriptions.....	26
6.3.1.2 Signal descriptions.....	27
6.4 Switching on	27
6.5 Switching off	27
6.6 Starting mode	27
6.6.1 Manual start up	27
6.6.2 Automatic start up	27
6.7 Settings.....	27
6.7.1 Setting current time.....	27
6.7.2 Setting ON / OFF periods	28
6.7.3 Reading a restored program.....	28
6.7.4 Modifying a programme	28
6.7.5 Deleting a stored programme	28
6.7.6 Changing the Temperature and Humidity values	28
6.7.7 Locking/unlocking remote control unit	29
6.8 Operating Mode.....	29
6.8.1 Cooling.....	29
6.8.2 Ventilation	29
6.9 Operating Faults.....	30
6.10 Bus system	30
SECTION 7 – MAINTENANCE	30
7.1 End-of-Season Maintenance.....	30
7.2 Pre-Season Maintenance	30
7.3 Maintenance Safety Regulations.....	31
7.3.1 Clothing.....	31
7.3.2 Unit warnings	32
7.3.3 Residual risks.....	32
7.3.4 Unit warnings	32
7.4 Technical assistance requests	32
SECTION 8 – DISMANTLING	32
8.1 Disposal.....	32

General Information

The contents of this document are for information purposes only and are subject to modifications without notice;

This manual must be kept in the project file until final machine dismantling and if the machine is sold, it must be passed to the new owner.

If a fault occurs causing machine stoppage, AmbiRad Limited is not liable in any way for any damages caused by the stoppage and in no way is the warranty period extended.

User Information

This manual is to be considered an integral part of the machine and must be filed in an accessible place for the workers that use and maintain the machine.

The workers using and maintaining the machine must be fully aware of its contents before the machine is placed in service.

If the manual is misplaced or damaged, immediately request a copy by contacting Technical Assistance Service at AmbiRad Limited, indicating the identification data of the plant shown on the machine identification plate and on the cover of this manual.

The machine is conforming to the following European Community Directives:

2006/42/EEC Machinery Directive
2006/95/EEC Low Voltage Directive
2004/108/EEC EMC Directive



UNDER NO CIRCUMSTANCES MAKE MODIFICATIONS TO THE MACHINE AND ITS INTENDED USE.



AmbiRad Limited declines all responsibility for any damages which may be, directly or indirectly, caused to exposed persons or property, due to improper use or use of the machine for different purposes other than the design purposes, incorrect installation, inappropriate power supply, different or changes to the installation environment from the one declared during order confirmation, grave deficiency of maintenance, unauthorized alterations and modifications, use of non-original spare parts, removal of the protection guards, ignoring the instructions for use, negligence, etc.

1. Technical Information.

1.1 Machine identification data

Machine identification data is shown on the warranty sheet supplied to the customer and is enclosed in the documentation and on the machine identification plate.

1.2 Introduction

During the summer to improve the internal environment within a production unit, warehouse or other area, it is necessary to ventilate the

area with frequent changes of fresh, filtered and possibly cool air. For large areas such as industrial buildings, an air conditioning plant is not practicable due to the large volume of air to be cooled and the thermal loads of processes to be neutralized, requiring very high energy load, plus the cooling effect is reduced by the exhaust air extraction plant and frequent opening of doors during normal activity.


Evaporative cooling plants that cool the air using a natural principle represent an optimal solution: air passes through special wet water filters,

losing part of its heat during the evaporation process of the water and hence lowering the air temperature. The absence of refrigeration plant

reduces energy consumption to a minimum and enables large volumes of air to be treated.

1.3 Technical Data

		Unit	WA 100	WA 150
Air Capacity	Maximum	m ³ /h	10000	13000
	Average		7500	9700
	Minimum		5000	6500
Cooling Capacity ⁽¹⁾		kW	15	19
Power Voltage		V	230V - 50Hz	230V - 50Hz
Current		amps	3.7	4.8
Power Consumption		kW	0.9	1.2
Water Consumption (average)*		l/h	34	39
Water Inlet Ø		in	3/8	3/8
Water Outlet Ø		mm	60	60
Air Duct Size		mm	600 x 600	600 x 600
Maximum Duct Length		m	5+1 bend	5+1 bend
Humidification Panel:				
Thickness		mm	100	100
Surface Area		m ²	2	2
Saturation Efficiency		%	88%	88%
Dimensions : L x W X H		mm	1300 x 670 x 1300	1300 x 670 x 1300
Weight (empty - full)		kg	60 - 75	63 - 78
Noise Data			Min/Max speed	Min/Max speed
Outdoor ⁽²⁾		dB	49 / 65	50 / 66
Indoor		A	49 / 66	50 / 67

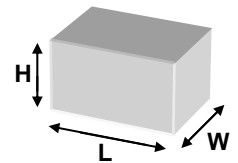


		Unit	RC 100	RA 150	RA 200	RC 200
Air Capacity	Maximum	m ³ /h	10000	13000	20000	20000
	Average		-	9700	15000	-
	Minimum		5000	6500	10000	10000
Cooling Capacity ⁽¹⁾		kW	15	19	30	36
Power Voltage		V	400V - 50Hz (3pha)	230V - 50Hz	230V - 50Hz	400V - 50Hz (3pha)
Current		amps	3.5	4.8	7.0	7.0
Power Consumption		kW	1.6	1.2	1.8	3.2
Water Consumption (avg)*		l/h	34	43	64	64
Water Inlet Ø		in	3/8	3/8	3/8	3/8
Water Outlet Ø		mm	60	60	60	60
Air Duct Size		mm	600 x 600	600 x 600	600 x 1150	850 x 470
Static Pressure		pa	80	n/a	n/a	80
Maximum Duct Length		m	See graph page 5	5+1 bend	5+1 bend	See graph page 6
Humidification Panel:						
Thickness		mm	100	100	100	100
Surface Area		m ²	2.7	2.7	3.4	3.4
Saturation Efficiency		%	88%	88%	88%	88%
Dimensions : L x W X H		mm	1150 x 1150x 1050	1150 x 1150x 1050	1650 x 1150x 1050	1650 x 1150x 1050
Weight (empty - full)		kg	87 - 108	67 - 88	120 - 146	160 - 186
Noise Data			Min/Max speed	Min/Max speed	Min/Max speed	Min/Max speed
Outdoor ⁽²⁾		dBA	55 / 61	50 / 66	53 / 68	58 / 65
Indoor			56 / 62	50 / 67	53 / 70	60 / 66


(1) test conditions: E. Temp. = 33°C-R. Hum 60%

(2) open field test, 4m distance

RC100 Fan Curve

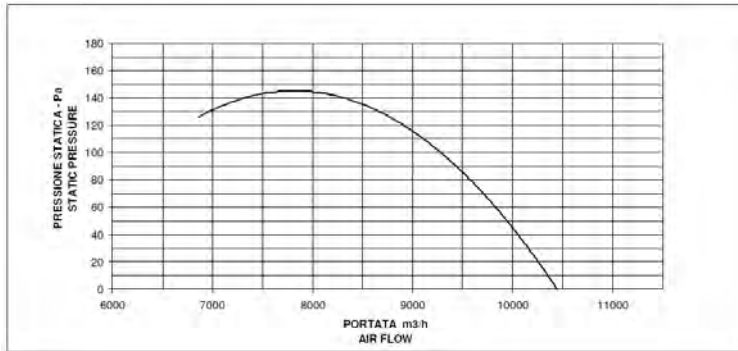

RC200 Fan Curve

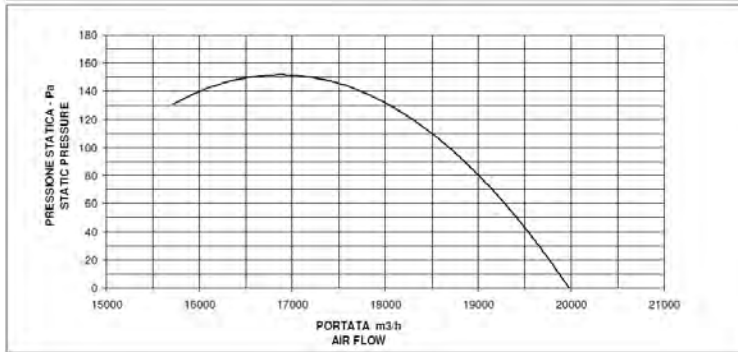

1.4 Warnings

The **ColdAIR** evaporative cooler can be installed in all areas where it is necessary to improve the internal environment where the area must be ventilated with frequent changes of fresh, filtered

and possibly cool air, such as:

- Factories, production areas
- Commercial premises
- Warehouses



The equipment must NOT be used for anything other than its designed use for any reason whatsoever or used in a different way than stated in this manual. DO NOT install the machine in closed areas; the machine must be installed outside the area to be treated, except by specific approval of the manufacturer.



Do NOT start-up the machine if it is not connected to the relative plant (duct) of air distribution.



When the plant is operating, do not touch the fan – Mechanical danger. Under NO circumstance should any work be undertaken on moving parts.

1.5 Control Panels

Any Controllers supplied by AmbiRad are manufactured according to EN 60204/1 regulations.



UNDER NO CIRCUMSTANCE MAKE MODIFICATIONS TO THE CONTROL PANEL.



UNDER NO CIRCUMSTANCE USE WATER TO PUT OUT FIRES

1.6 Improper Use


The unit cannot be used for purposes other than those stated in paragraph 1.4 of this instruction manual.




UNDER NO CIRCUMSTANCE INSTALL COLD AIR EVAPORATIVE COOLING PLANTS IN POTENTIALLY EXPLOSIVE ENVIRONMENTS.

2. Dimensions.


2.1 RA150

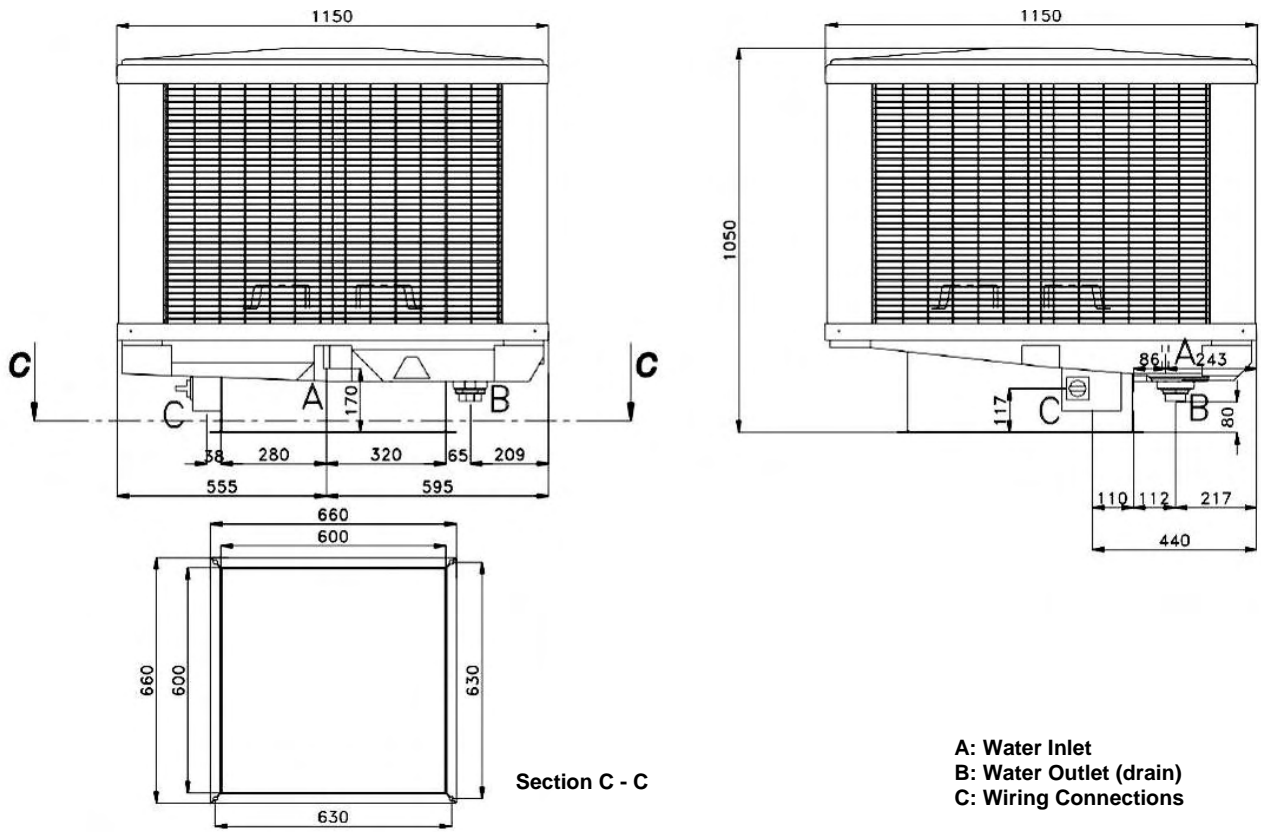


2.2 RA200

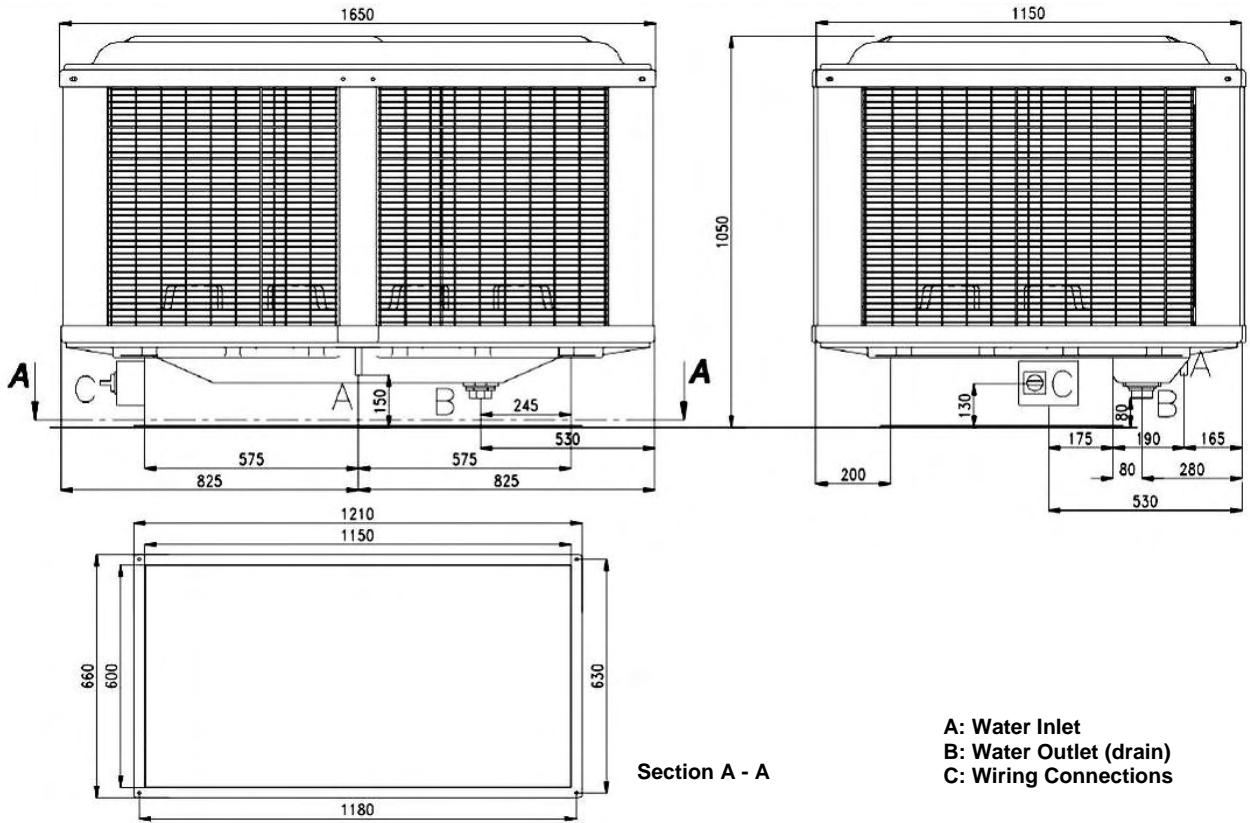


2.3 RC100

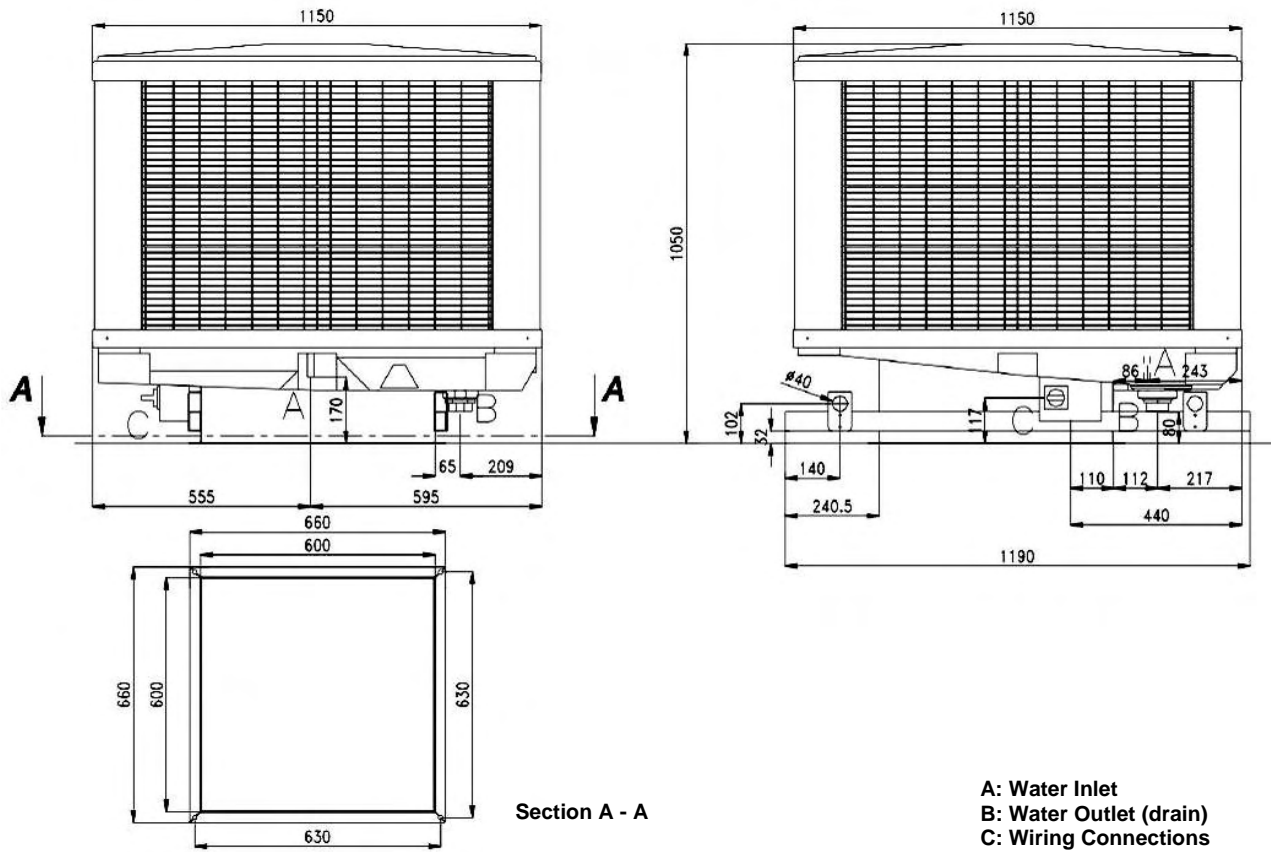

2.4 RC200

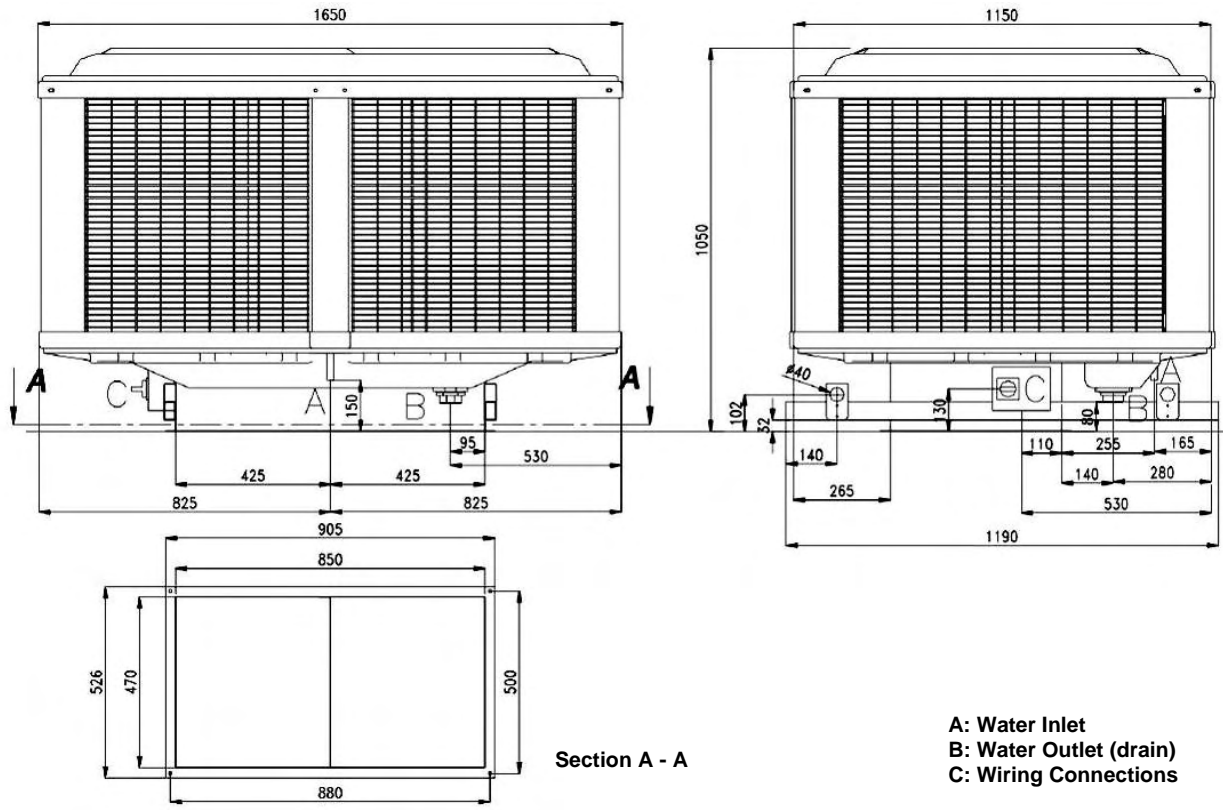

2.5 WA100/150

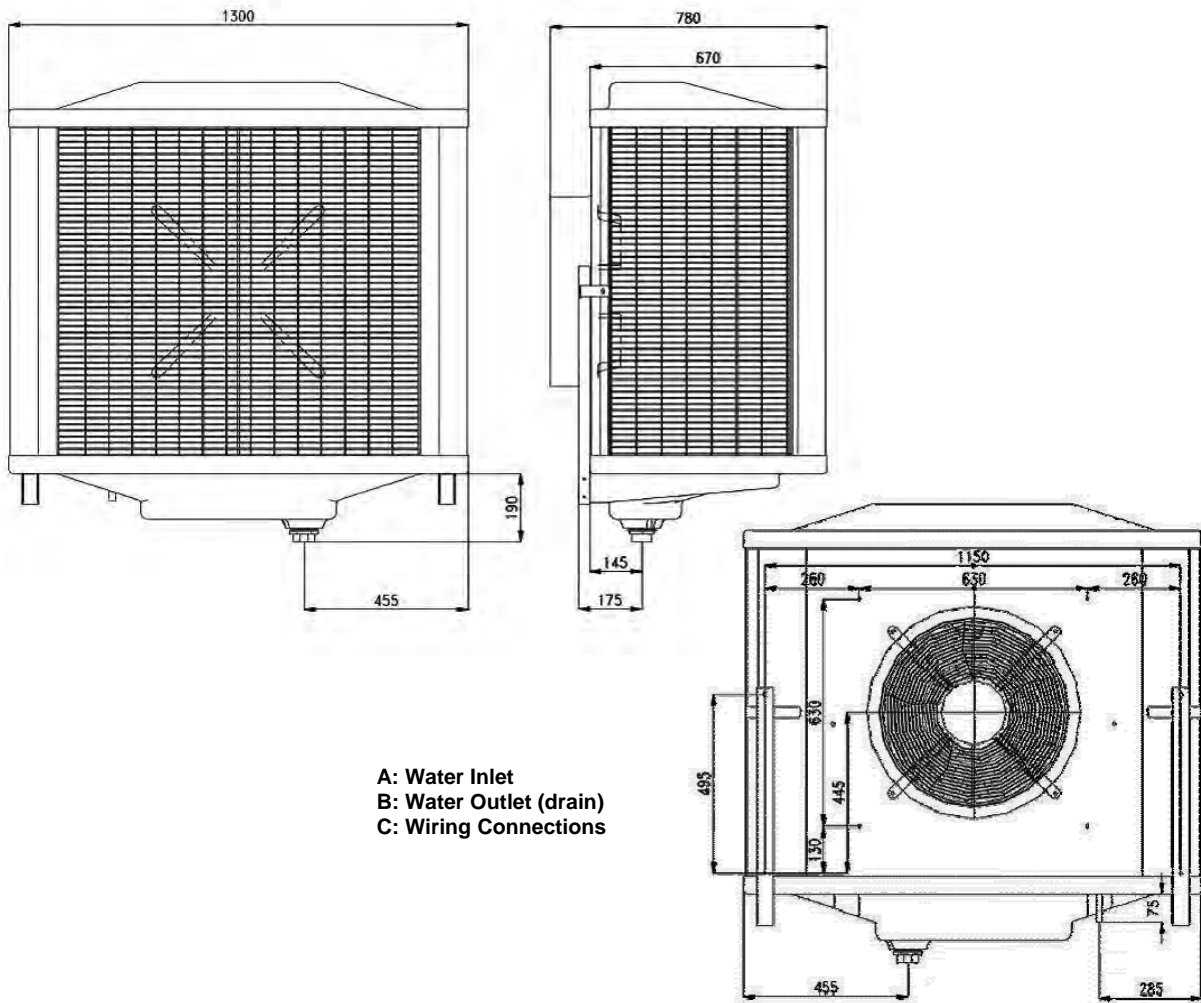

A: Water Inlet
 B: Water Outlet (drain)
 C: Wiring Connections


3. Packaging, Handling and Transportation.

3.1 Delivery of the unit

When the unit is delivered, the customer **MUST** check the condition of the goods



Check the packaging and its contents, if damage due to transportation is found, record the damage on the shipping documents to be signed by the shipping agent and send a copy by fax to AmbiRad Limited

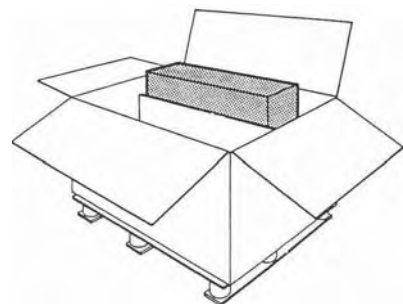

3.2 Handling and transportation




Take care when handling Evaporative Cooling units. During off loading, handle and position to avoid damage to the equipment. Avoid contact with elements, which may damage the equipment.




AmbiRad Limited declines any responsibility for damage caused during transportation, loading and off loading of the evaporative cooling units.

3.3 Lifting

3.3.1 Lifting with fork lift

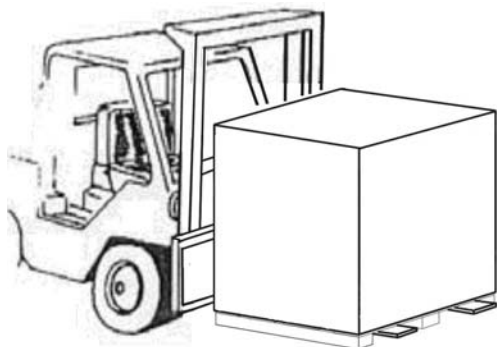


Widen the forks as much as possible to balance the load. Dip the ends of the forks to avoid

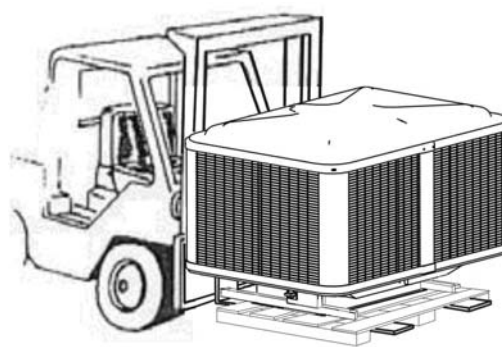


damaging the bottom of the machine.

3.3.2 Lifting with cables

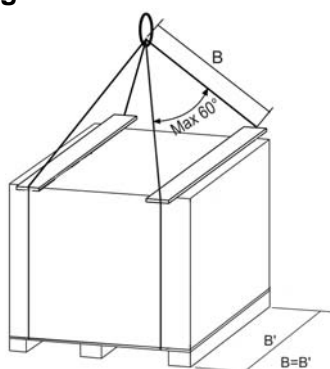

We suggest to attach the cables as shown, inserting spacers of an adequate length to prevent the cables from damaging the casing when tightened.

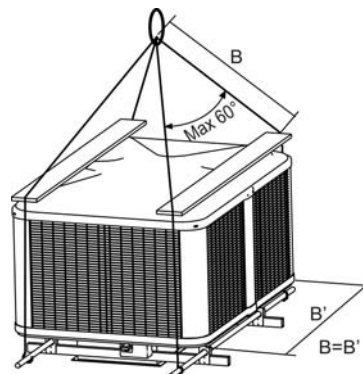

Because of the heavy weight, RC models, when unpacked, are provided with punched brackets to allow to lift them by using appropriate metal tubes.



Place goods down with care. Avoiding dropping and sudden movements.



UNDER NO CIRCUMSTANCE remain under suspended loads and inside the movement area of the lifting equipment.



***Make sure that the capacity of the lifting equipment is adequate for the weight of the machine.
Lifting must only be carried out by qualified personnel.***

3.4 Unpacking the equipment

Free all the components from the packaging material and collect the packaging to avoid potential danger of fire and suffocation of persons or animals.

Leave the equipment on its transportation packaging base with any protection guards mounted, so that the lower part is raised from the floor to avoid damage, until the unit is installed.



Disposal of packaging materials must conform to the regulations in force in the country of destination where the evaporative cooling unit is installed

3.5 Storage

During transportation and storage, make sure that the environmental temperature is between 10 and 50 °C.

If the **ColdAIR** evaporative cooling unit must be stored, make sure that the relative humidity in the warehouse is between 5% and 90%.

4. Installation WA Units.

4.1 General Warnings about installing WA units.

Before proceeding to install, make sure that each evaporative cooling unit has been unpacked and checked for damage.

Positioning and installation of the evaporative cooling units must be carried out by qualified personnel and by observing the laws in force in the country of destination.

4.2 Positioning and Installation of WA Series evaporative cooling units.

4.2.1 Wall installation

Fix the support bracket to the wall after the hole for the air duct has been made. Refer to dimensional sketch below.

On the rear side of the cooling unit (fan side), prepare the first section of air duct (box section 600 x 600mm)

Position the cooling unit onto the support bracket, pushing the cooling unit towards the

wall until it makes contact with the rear mountings of the bracket

Fix the cooling unit using the appropriate side brackets and the self tapping screws provided.

4.2.2 Window installation


Fix the window bridge to the window after the hole for the air duct has been made. Refer to dimensional sketch below.

Fix the supplied support bracket at the prepared frame.

On the rear side of the cooling unit (fan side), prepare the first section of air duct (box section 600 x 600mm)


Position the cooling unit onto the support bracket, pushing the cooling unit towards the wall until it makes contact with the rear mountings of the bracket

Fix the cooling unit using the appropriate side brackets and the self tapping screws provided.

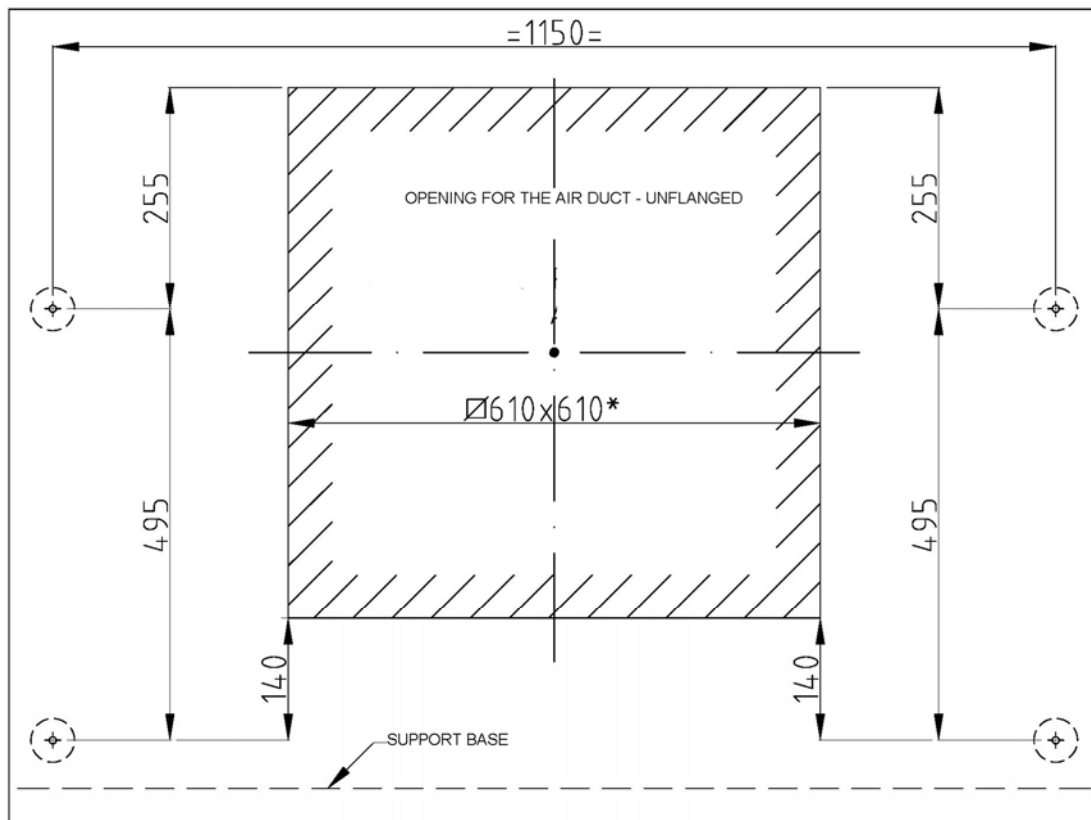


* $\varnothing 665 \times 665$ OPENING FOR THE AIR DUCT - FLANGED

WALL INSTALLATION

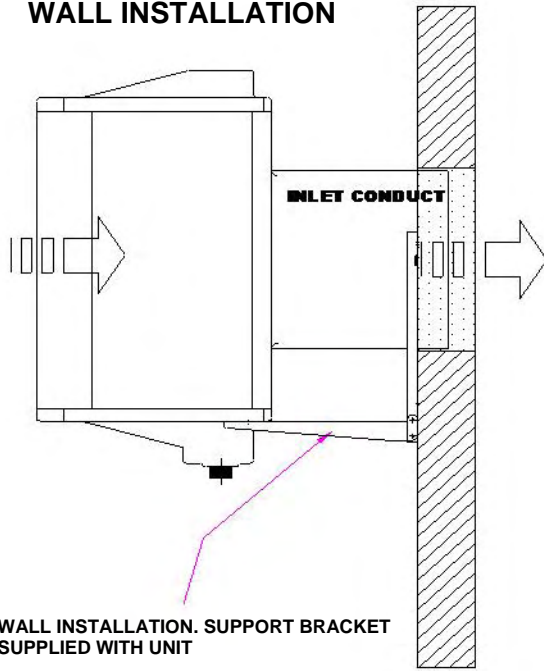

WINDOW INSTALLATION

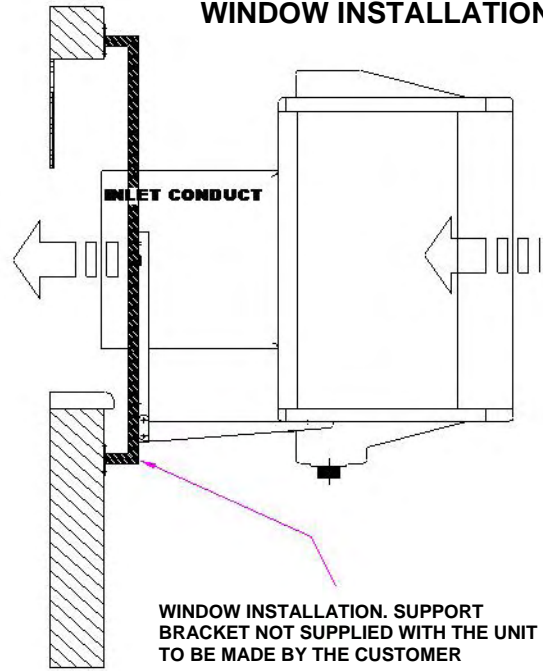

Installation RA/RC Units.

4.3 General Warnings about installing RA/RC units

Before proceeding to install, make sure that each evaporative cooling unit has been unpacked and checked for damage.

Positioning and installation of the evaporative cooling units must be carried out by qualified personnel and by observing the laws in force in the country of destination.



4.4 Positioning and Installation of RA/RC series evaporative cooling units.

4.4.1 Roof mounted RA Evaporative coolers.

Prepare and secure the air inlet duct onto the roof structure. (The unit is equipped with a mating duct flange for direct attachment).

DUCT DIMENSIONS:

- RA 150 = 600 X 600mm
- RA 200 = 600 X 1150mm

Position the base of the cooling unit onto the duct flange using fixings provided.

It is recommended to apply silicone sealant between the two flanges to guarantee a perfect water tight seal.



Check that the clamp holding the flexible hose to the pump is tight.




Position and secure the four posts to each corner of the cooling unit base using the screws provided.



Position and secure the humidification panels by sliding them between the guides of each side post.

Ensure the groove, on one side of the panel, is uppermost.

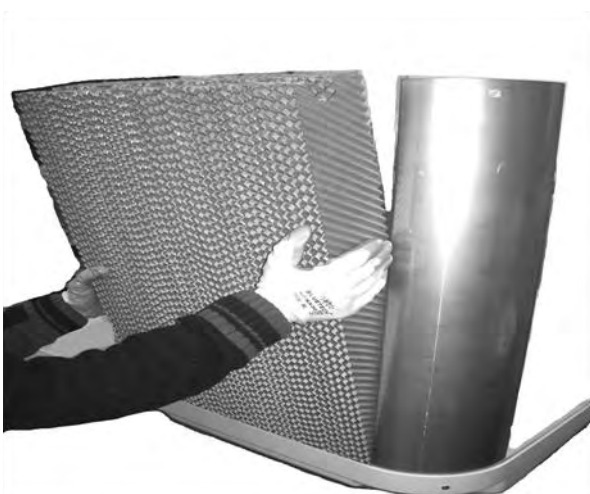


Insert the water distribution strips into the grooves on each panel.

Ensure all strips are seated correctly in their grooves.



Insert the water distributor into the grooves of the humidification panels ensuring the supports of the water distributor are in a uniform manner on the strips.

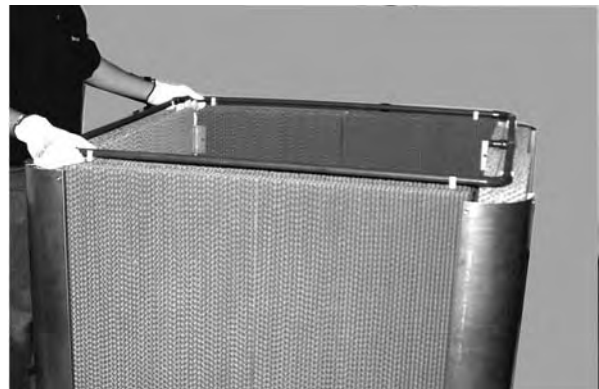

Noting the position of the water pump in the unit, make a hole through the panel for the hose end fitting.



Secure the fitting with a hose clamp and complete the water connections to the pump.


Insert the grilles onto the sides of the panels using clips provided




Note: DO NOT ASSEMBLE THE GRILLE AT THE FRONT OF THE MACHINE (CONNECTIONS / COMPONENTS SIDE). The grille can be inserted later without clips to aid maintenance.

Insert the clips downwards to their first positive stop.

Once all the clips are in position, push fully home until they are level with the top of the panels.

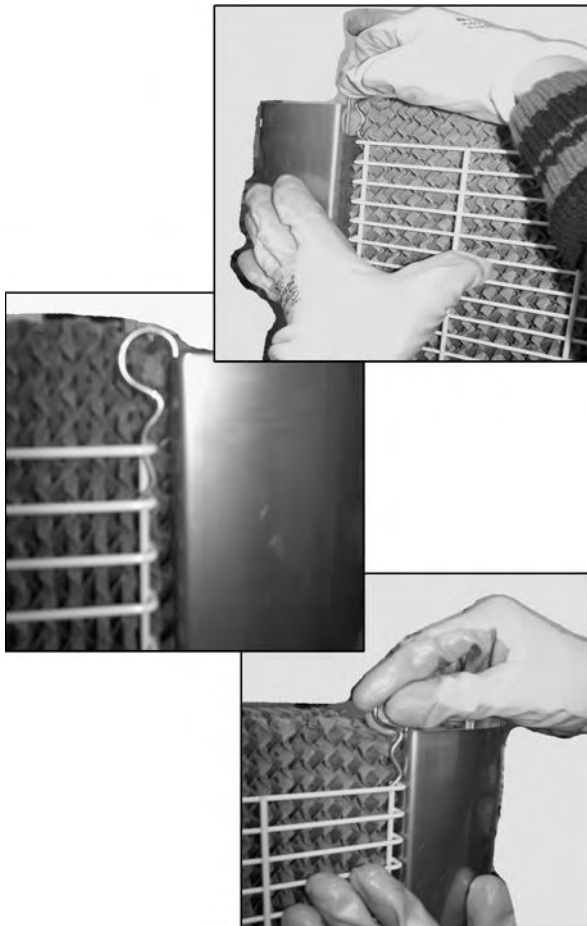


Once all four protection grilles have been secured, locate and fix the top of the unit using the screws provided.

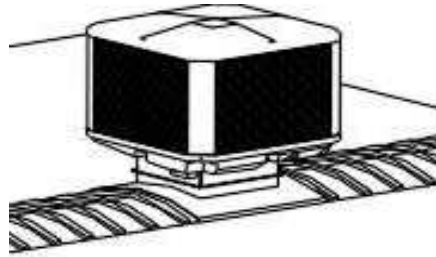

4.4.2 Roof mounted RC Evaporative coolers

Prepare and fix an air inlet flanged duct and a frame to hold up the unit. The flange has to be of the same dimension of the unit's trunk duct flange.

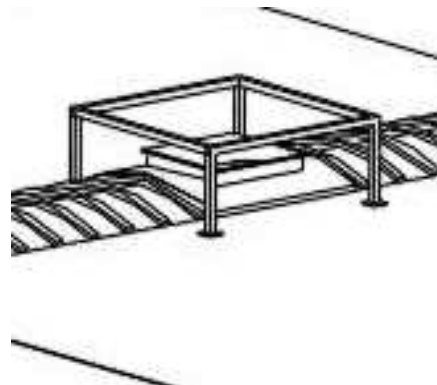


The unit is equipped with a section of flanged duct that will be fixed to the flange of the inlet duct already prepared and with two side bars that will be fixed to the prepared frame.

Verify that the frame is designed to support the weight of the machine, doesn't cause vibrations and is perfectly horizontal. It may be necessary to insert anti-vibration dampers between frame and the bars, this needs to be planned before manufacturing the frame and consider fitting flexible couplings in the water connections.

Position the evaporative cooler on the inlet duct.

Fix the two flanges (base duct flange-inlet duct flange) together and the bars at the frame by using provided bolts.

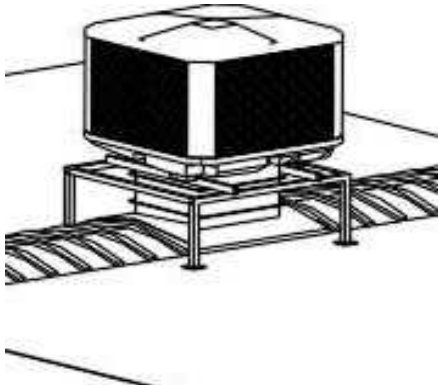

We recommend fitting an outlet flexible connection between the two flanges to avoid vibrations transmitted through the ducts.

We recommend applying silicone sealant between flanges to guarantee perfect insulation from external agents.

4.4.3 Wall/Window mounted RC evaporative coolers

Prepare and fix an air inlet flanged duct and a frame to hold up the unit.




The flange has to be of the same dimension of the unit's trunk duct flange.

The unit is equipped with a trunk of flanged duct that will be fixed to the flange of the inlet duct already prepared and with two side bars that will be fixed on the frame.

Verify that the frame is designed to support the weight of the machine, doesn't cause vibrations and is perfectly horizontal. It may be necessary to insert anti-vibration dampers between frame and bars, this needs to be planned before manufacturing the frame and consider fitting flexible couplings in the water connections.

Position the evaporative cooler on the inlet duct.

Fix the two flanges (base duct flange-inlet duct flange) together and the bars at the frame by using provided bolts.

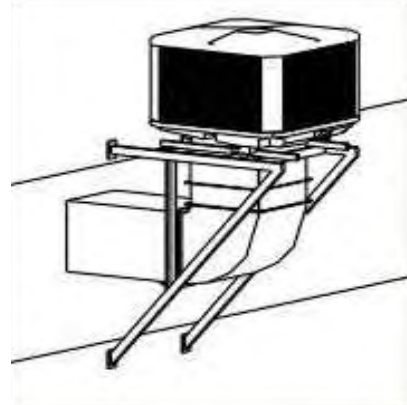

We would suggest to insert an outlet flexible connection between the two flanges to avoid vibrations transmitted through the ducts.

4.4.4 Wall/Window mounted RA evaporative coolers

Prepare and fix an air inlet flanged duct and a frame to hold up the unit.




The flange has to be of the same dimension of the unit's trunk duct flange.

The unit is equipped with a trunk of flanged duct that will be fixed to the flange of the inlet duct already prepared and with two side bars that will be fixed on the frame.

Verify that the frame is designed to support the weight of the machine, doesn't cause vibrations and is perfectly horizontal.

Position the evaporative cooler to the inlet duct.

Fix the two flanges (base duct flange-inlet duct flange) together by using bolts provided.

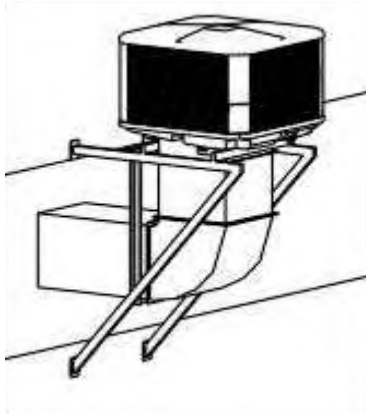

4.5 Installation

Inside the building, prepare the first fixings points for the support chains of the air inlet duct. These must be placed in a position to avoid excessive force on the air inlet duct and make sure they are on the same axis as the machine.

To support the unit from the ceiling or the wall, use chains and accessories having the necessary test certificates, made from zinc-plated steel or stainless steel and having a wire diameter of no less than 3 mm or dimensioned for the weight to be supported, bear in mind safety margins imposed by regulations.

We recommend applying silicone sealant between flanges to guarantee perfect insulation from external agents.



DO NOT USE ALUMINIUM ALLOY OR SIMILAR COMPONENTS



Once the plant has been installed, rotate the diffuser blades towards the exterior and adjust the blades to an optimal position to direct the airflow.



4.6 Connection to the power supply



Connection to the power supply must be carried out by qualified personnel. All components used to connect the power supply must be certified. Before working on the power supply cables, make sure that power is cut-off.



Provide an efficient earth connection .

The power supply is: **230 V ~ 50 Hz**

Each cooling unit must be connected to the power supply using a two pole switch. The isolator must have a distance between its contacts of at least 3 mm for each pole and

must be placed in a position that can be easily reached.

The electrical installation must be in accordance to the current I.E.E. Regulations.

The cooling unit is supplied with:

- An Electrical board and Main power inlet switch for connection, near to the unit.
- A Control panel with display for remote command of the equipment, positioned inside the building.

A multi-core cable made of 2* or 4** core + earth, for connection to the power supply: Make the necessary cable extensions using cables of adequate sections depending on the distance to

be covered. (*WA/RA units **RC units)

A multi-core cable with 5 cores, for connection of the remote control panel to the cooling unit. Make the connection using shielded cable type **20 AWG - 5 core** with a minimum section of **0.5mm²** - Maximum length of **25 meters**.

It is essential to maintain the polarity of the electrical phases and the numbers on the wires/terminals.


Connections are made as shown on the wiring diagram below.

4.7 Wiring Diagrams

4.7.1 Control Panel with Temperature Probe

- Connect the cooling unit to the power supply using the 2*/4** pole isolator switch. (*WA/RA units **RC units)
- Connect the Remote Control Panel to the Cooling Unit using a 5 core

screened cable as shown in the diagram below, connect the 'screen' of the cable to the earth.

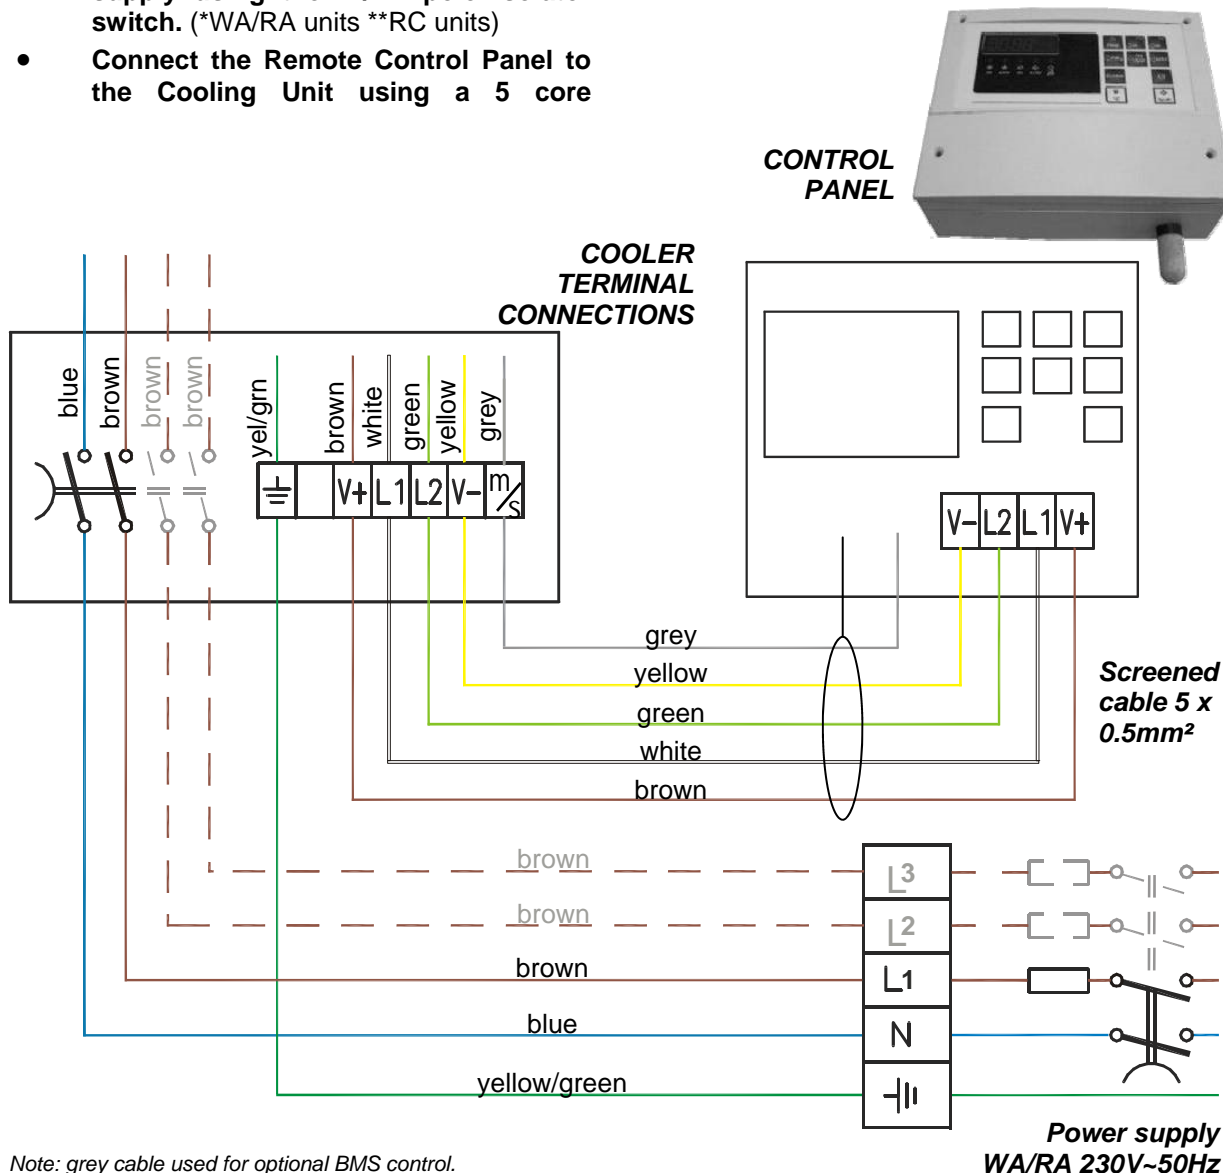


CONTROL PANEL

COOLER TERMINAL CONNECTIONS


Screened cable 5 x 0.5mm²

Power supply
WA/RA 230V~50Hz
RC 400V~50Hz


4.7.2 Schematic wiring for WA100 and RA150

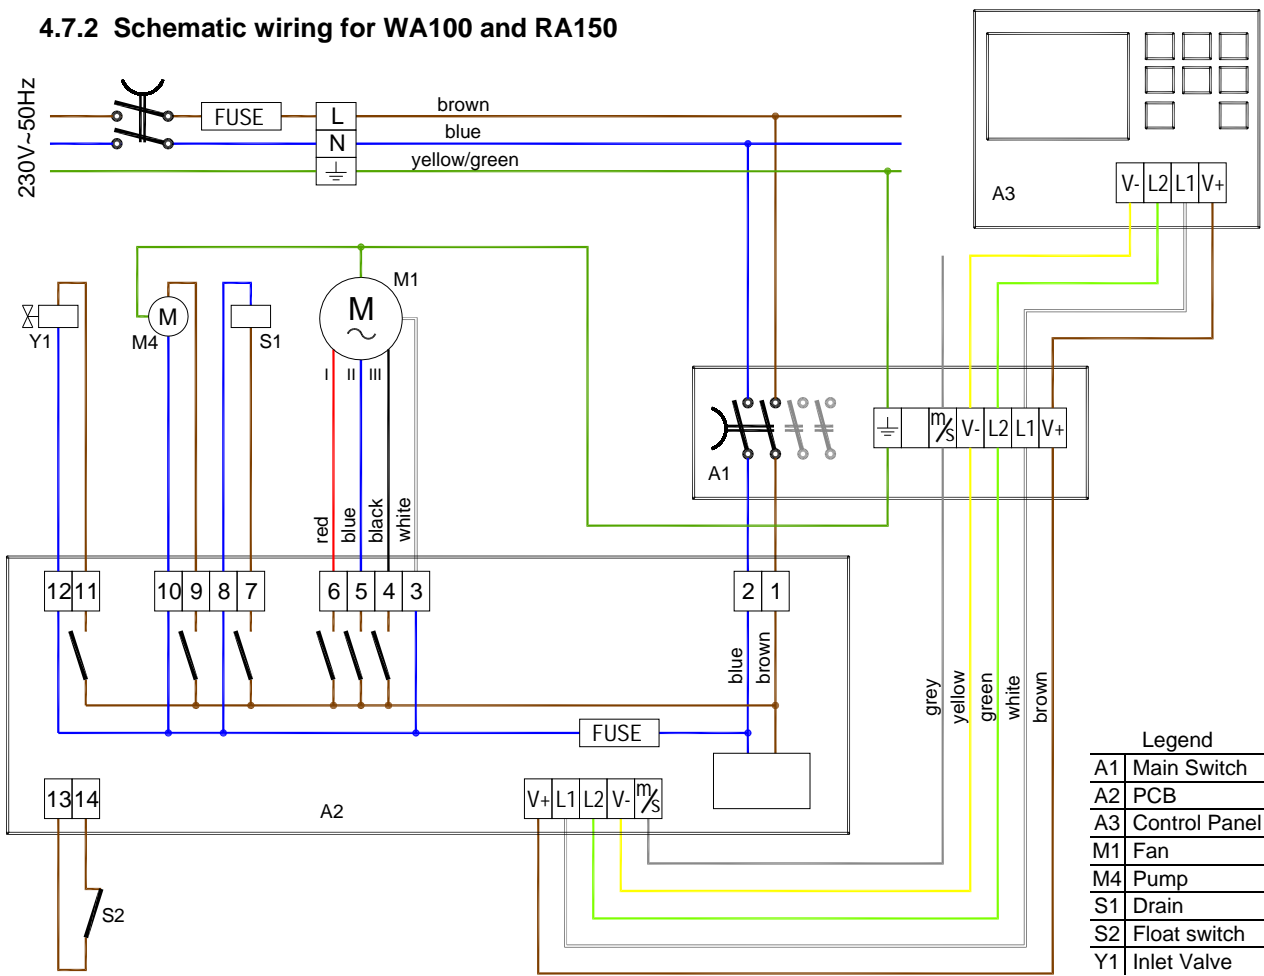

4.7.3 Schematic wiring for RA200

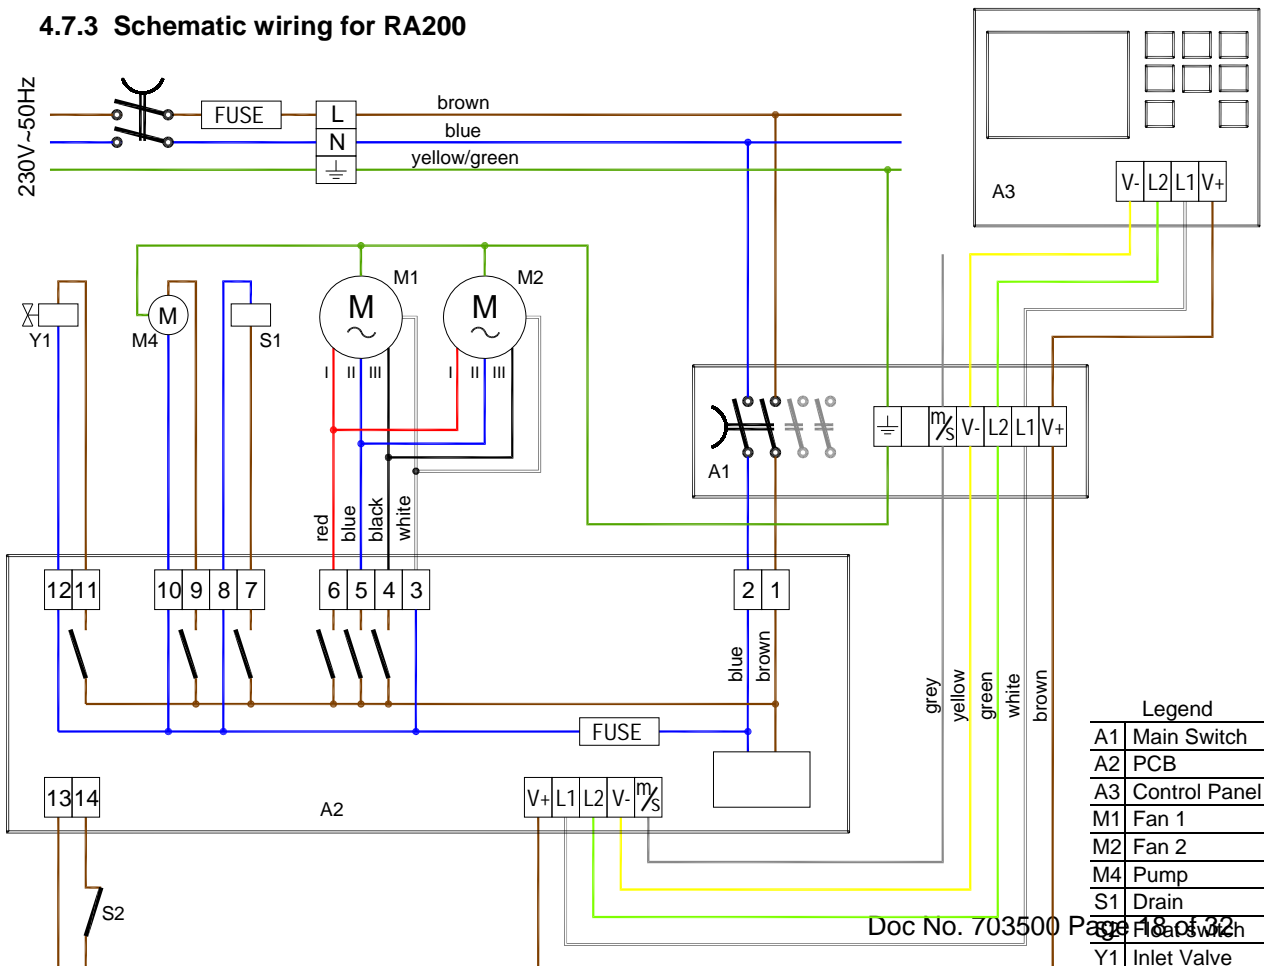


4.7.4 Schematic wiring for RC100

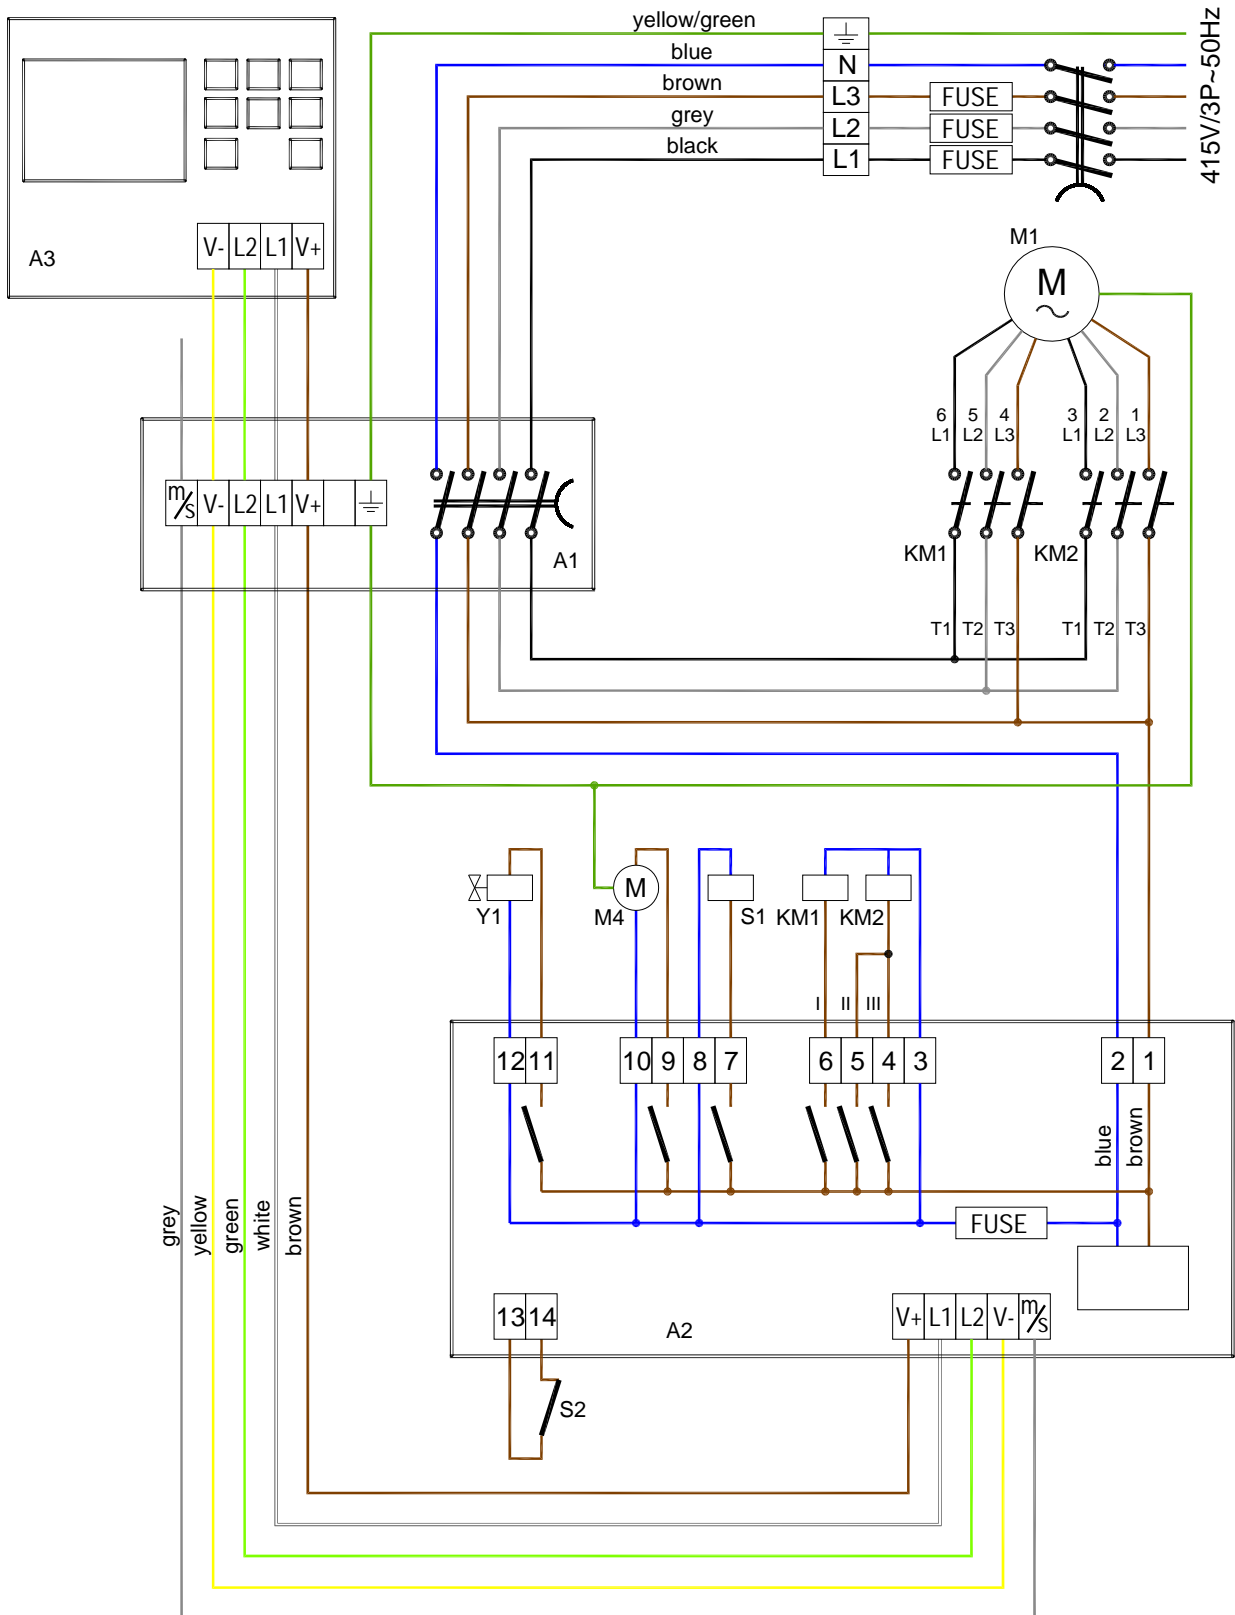

Legend

A1	Main Switch	M1	Fan 1
A2	PCB	M4	Pump
A3	Control Panel	S1	Drain
KM1	1st Speed contactor	S2	Float switch
KM2	2nd Speed contactor	Y1	Inlet Valve

4.7.5 Schematic wiring for RC200

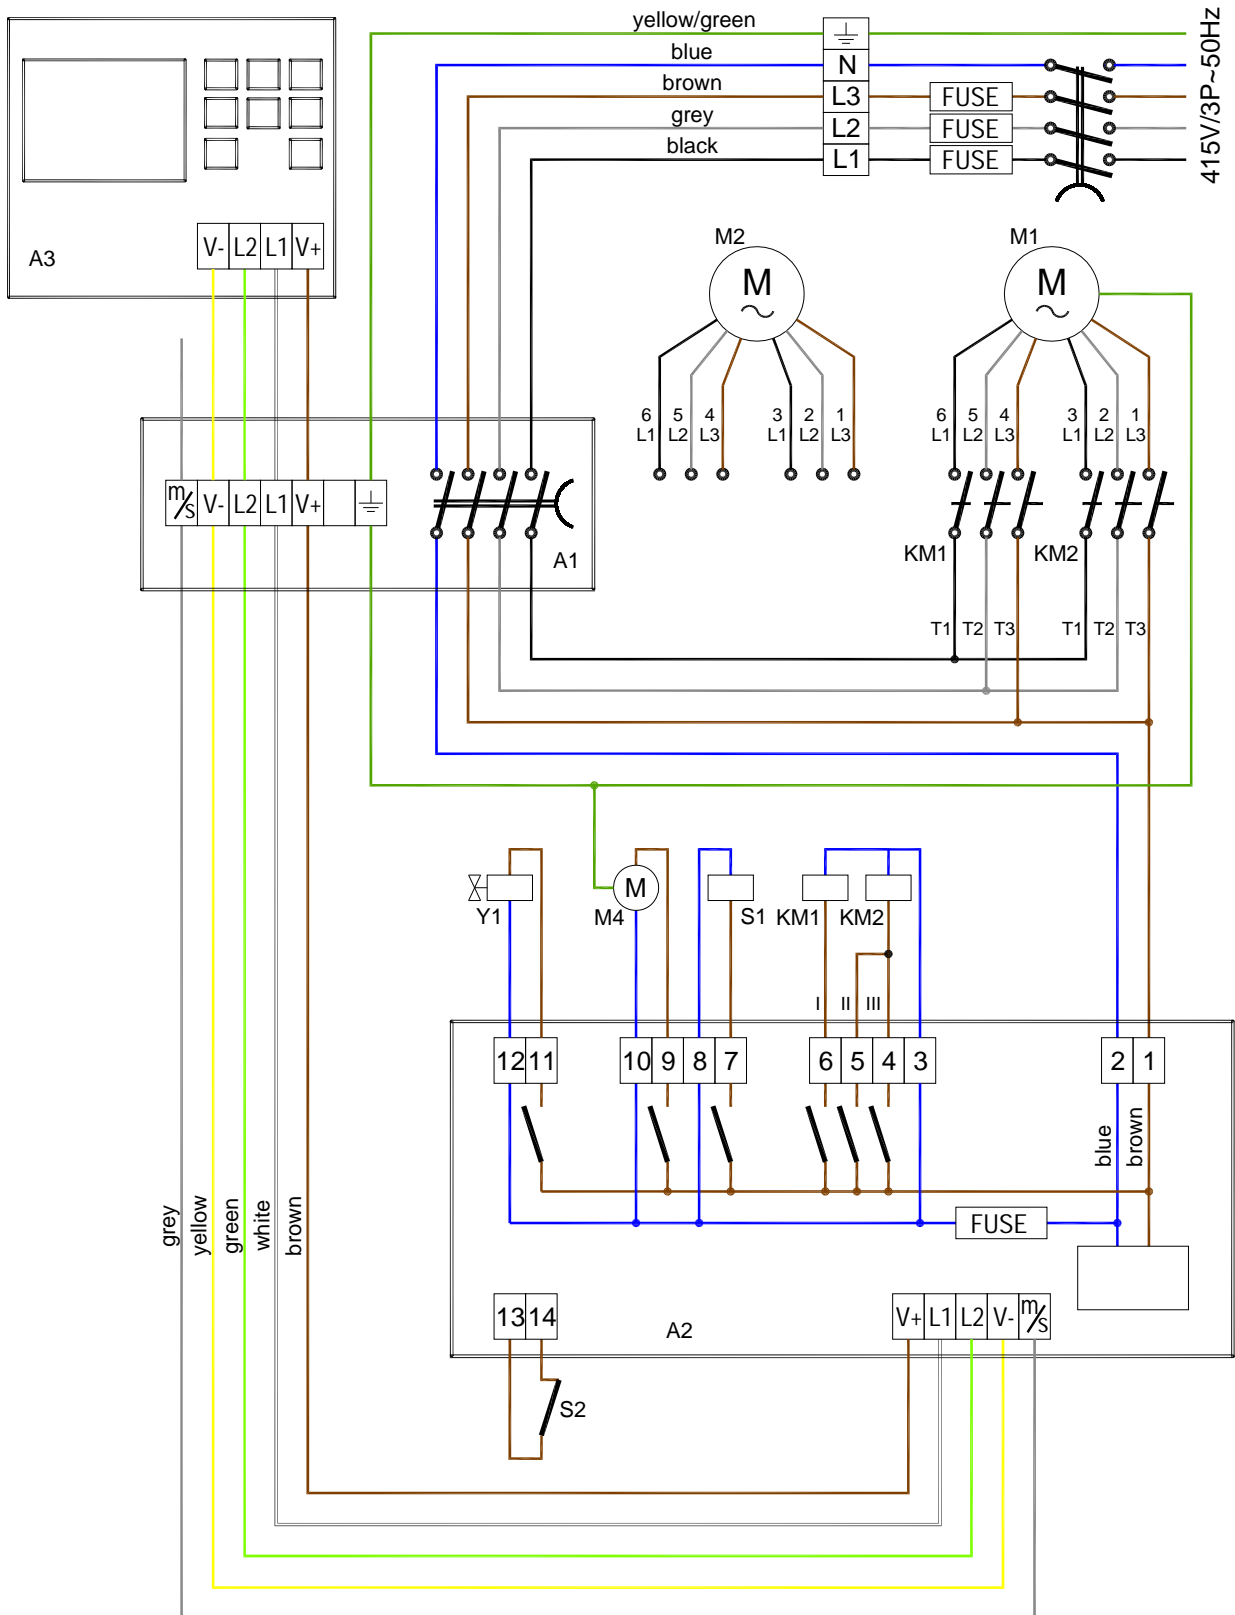

Legend

A1	Main Switch	M1	Fan 1
A2	PCB	M2	Fan 2
A3	Control Panel	M4	Pump
KM1	1st Speed contactor	S1	Drain
KM2	2nd Speed contactor	S2	Float switch
		Y1	Inlet Valve

4.7.6 Multiple Coolers


Multiple ColdAIR evaporative coolers can be connected into one system via a single control panel and one or more router modules.

When designing the system, the siting of the evaporative coolers and control panel must be carefully considered, as the sensor is built into the controller. Max distance between router and the coolers is 200m.

The system comprises of:

- 1 Control panel display unit.
- 1 ColdAIR evaporative cooler acting as a master.
- Up to a max of 3 routers each having a max of 4 ColdAIR evaporative coolers as slaves.


System examples shown below.

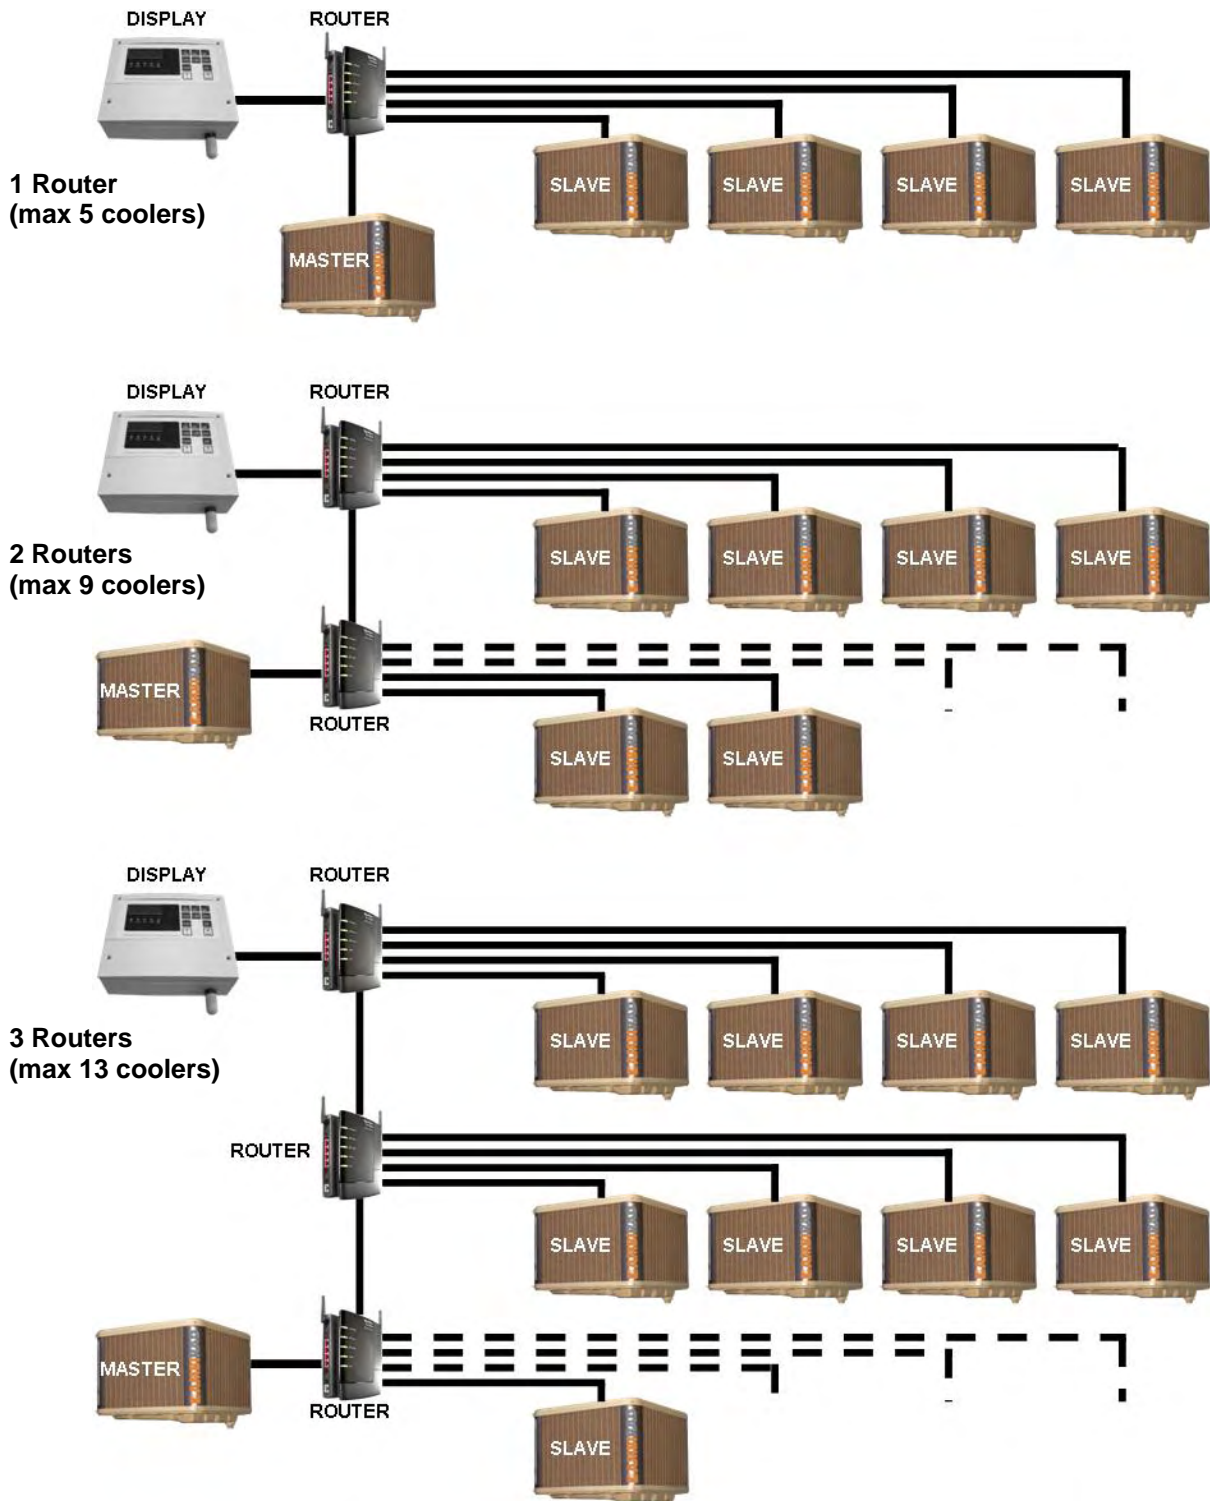

4.7.7 Multiple coolers via Single Router

Diagram for use with Display Module model ref SCP015V110 only.

Please consult supplier for display module ref SCRE10A/SCRE50D

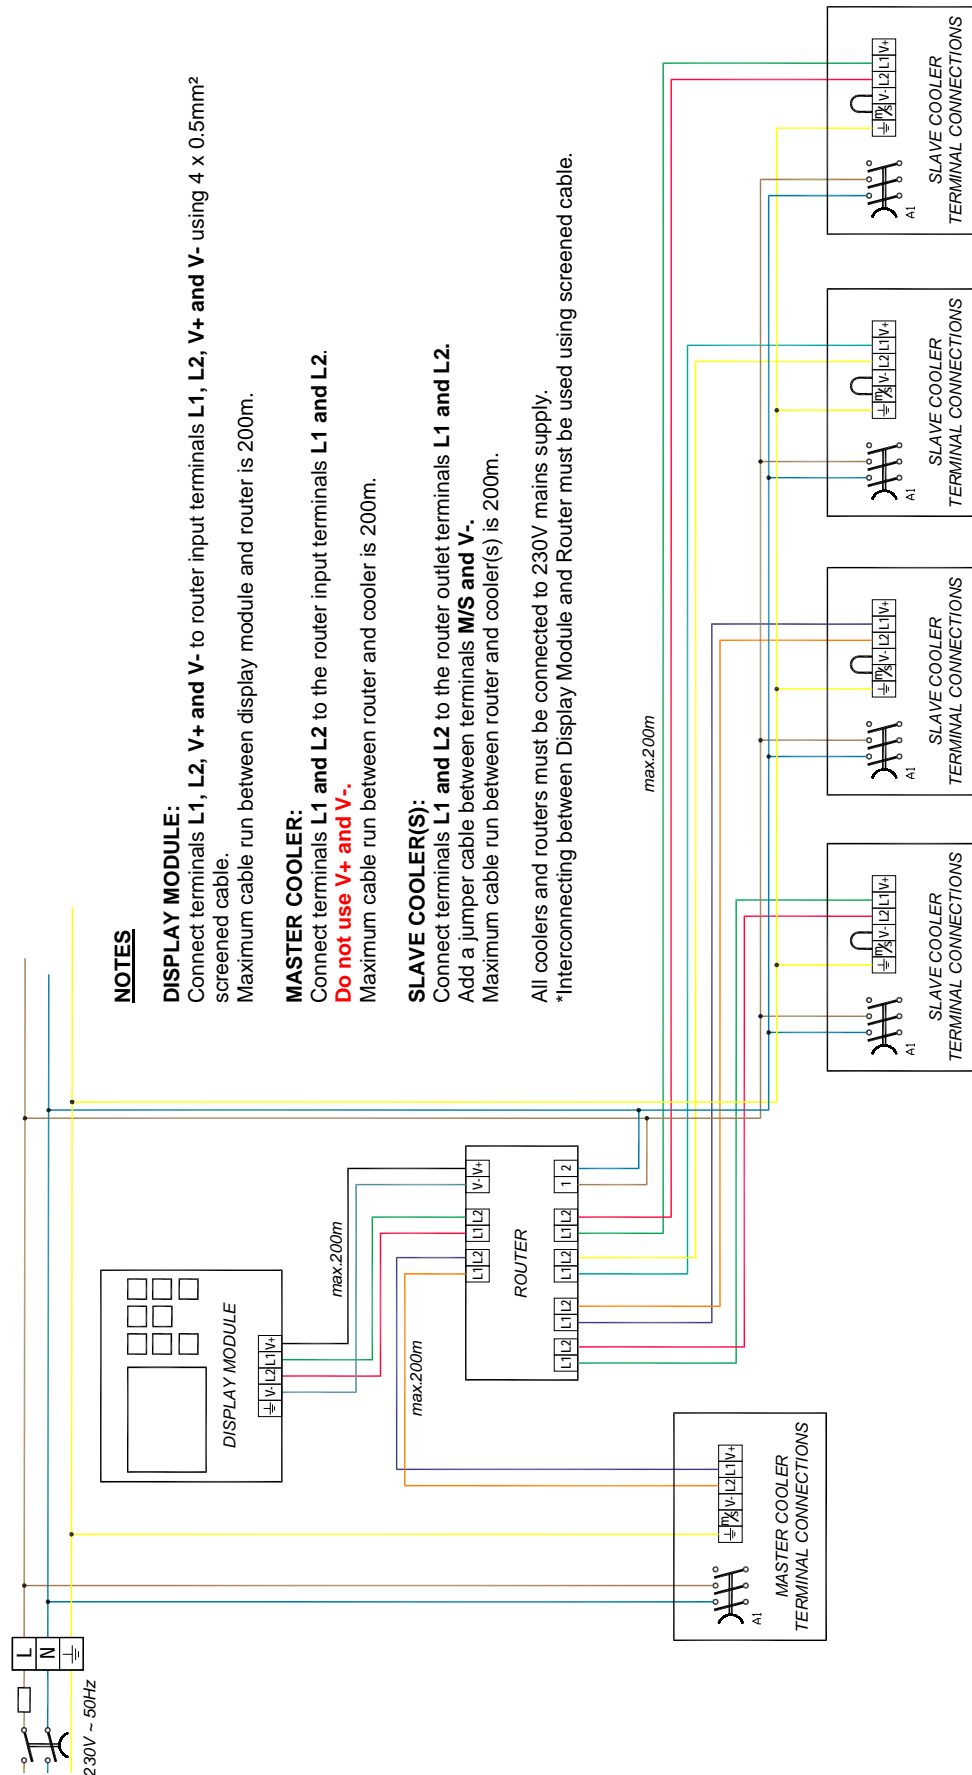

NOTES

DISPLAY MODULE:

Connect terminals L1, L2, V+ and V- to router input terminals L1, L2, V+ and V- using 4 x 0.5mm² screened cable.
Maximum cable run between display module and router is 200m.

MASTER COOLER:

Connect terminals L1 and L2 to the router input terminals L1 and L2.
Do not use V+ and V-.
Maximum cable run between router and cooler is 200m.

SLAVE COOLER(S):


Connect terminals L1 and L2 to the router outlet terminals L1 and L2.
Add a jumper cable between terminals M/S and V-.
Maximum cable run between router and cooler(s) is 200m.

All coolers and routers must be connected to 230V mains supply.
*Interconnecting between Display Module and Router must be used using screened cable.

4.7.8 Multiple coolers via two Routers

Diagram for use with Display Module model ref SCP015V110 only.

Please consult supplier for display module ref SCRE10A/SCRE50D

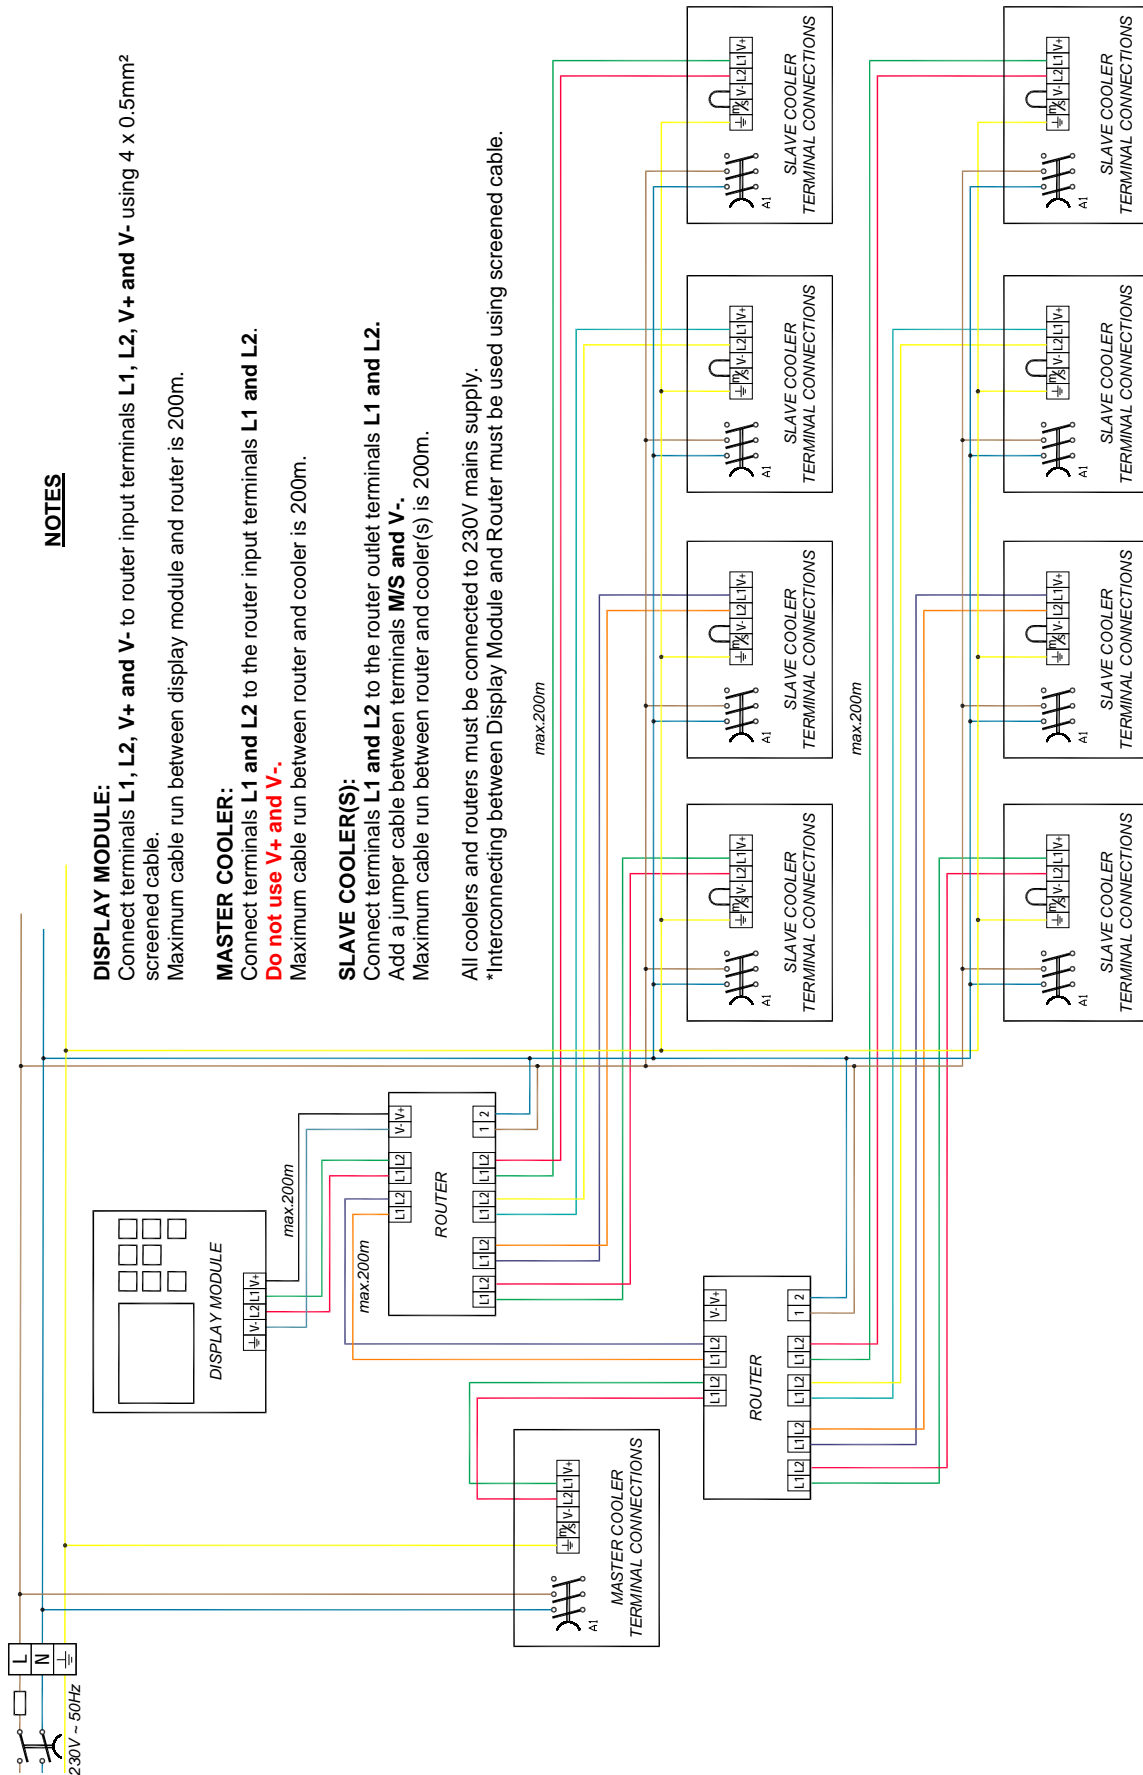

4.8 Connection to the water supply

The **ColdAIR** cooling unit is connected to the water supply by a 3/8" connection located on the bottom of the unit. The customer must provide a shut off valve to the machine inlet supply.

The water supply must guarantee a minimum capacity of 5 -10 Lt/minute at a pressure of 1.5 - 3 bars. (maximum pressure allowed: 6 bars).

It is advisable to install the water distribution inside the building, to protect it against freezing during winter and also make sure it can be emptied if necessary; on the contrary, insulate it adequately. Remove the protection material



from the 3/8" connection before proceeding to connect it to the main water supply.

The unit is also equipped with a Ø63 mm connection to discharge water, remove the protection material and connect a flexible hose, fix the hose using a hose clamp. Connect the hose to the discharge system according to the regulations in force regarding hygiene in the country where the unit is installed.



ATTENTION: DO NOT use excessive force when connecting either the water supply and discharge hose to their respective connections.

5. Health and Safety.

5.1 Protection devices

The safety systems on the unit comply with the regulations in force as required by the relevant EU Directive.

Maintenance personnel must wear suitable clothing and PPE

5.2 Clothing

The equipment is installed in locations which cannot be directly reached by users during normal operations and therefore particular attention regarding clothing is not necessary.

5.3 Residual risks



Pay attention to fan movement. Do not put arms or limbs in equipment. – Mechanical danger



Under NO circumstances use water to clean electro-mechanical components – Electrocutation danger

5.4 Emergency situations



In case of emergency:

Immediately stop the equipment and isolate the electrical circuit using the 2 pole isolator, identify and eliminate the problem by checking the causes of its origin.



UNDER NO CIRCUMSTANCES USE WATER TO PUT OUT FIRES, ONLY USE POWDER OR CO2 EXTINGUISHERS

6. User and Operating Instructions.

6.1 General

The operation of the evaporative cooler is based on an important principle. It introduces large quantities of fresh air into the building and removes hot unpleasant air through the doors, windows and other openings. If the system is not able to expel the volume of air being introduced, the efficiency of the system will be compromised.

INLET FRESH AIR = OUTLET HOT AIR. A very simple principle.

If the system is able to expel all the air introduced, the system will operate at its maximum efficiency level.

The ideal condition is to position the air diffusers away from the openings (windows, doors, etc.) in the building. By opening a window far away from the diffusers, the air will pass through the building and cool it down. Maximum efficiency can be reached by adjusting the dimensions of the window and door openings. Never close the openings: if they are closed, no changes of air will occur, consequently reducing the cooling effect and increasing the relative humidity level inside the building.

To optimize efficiency, take into account the following openings for air expulsion: Guarantee about 1m² area of extraction for every 1000m³ of treated air (refer to the project data).

A good rule for all evaporative coolers is that the more "dry" the external air is, the greater the temperature difference or the cooling capacity that can be reached. An air cooler will not operate at maximum efficiency on very humid days but it will still reach an efficient cooling level.

In areas with high relative humidity, the air cooler must be oversized to guarantee more air changes, or in other words, it must have a higher capacity to compensate the smaller temperature difference. In these areas, the maximum cooling effect will be reached by making sure that there are more air evacuation points than those normally used and that the units are already operating early in the morning to avoid the build-up of latent heat inside the space to be cooled. The design of the system will take into account local climatic conditions.

On days when the relative humidity level is near to or more than 70%-75%, it is advisable to operate the system in ventilation only mode.

6.2 First Start-up

6.2.1 All models

ATTENTION: For correct and optimal operation and use of the plant/machine **it is essential that during the first "start-up" operation (in cooling mode), the fan is operated at minimum speed and maintained at this speed for at least one complete day.** If this procedure is not observed, during the first day of use only, malfunctioning of the evaporative panels may occur resulting in water drops coming out of the ducts.

During the first start-up of the cooling system, an unusual odour may be detected which may be present for several hours. This odour is a characteristic of the treated cellulose material but it is not harmful.

6.2.2 RC models only

During first start-up, ensure correct rotation of the fan (as indicated on fan body):

1. Remove cover by unscrewing the 4 corners screws.
2. Enable ventilation mode
3. Check direction of motor.
4. If the fan rotates in the wrong direction, exchange the L1 and L2 connections at the main power supply switch.
5. Re-check direction of motor.
6. Replace cover.



Check the tightness of the belt.

To avoid any undue noises and ensuring long life, the drive belt will require adjusting after the first few hours of operation.

To check the belt, proceed as follows:

Place a perfectly straight bar on the two pulleys. Apply a light force on the middle of the belt and measure the distance of the flex of the belt. The distance should be between 10 and 15mm. Re-adjust where necessary. Do not over tighten as this will reduce the life of the belt and may cause the fan shaft to deform and overload the bearings.

Check the operating current of the motor against the rating plate. If the value is higher, this is normally the result of overestimating the pressure drop in the system, and must be corrected by adjusting any dampers and/or the transmission ratio by changing one of the two pulleys.

6.3 Remote Command Unit


ColdAIR cooling units are equipped with a remote control panel, which enables the user to control: **SWITCHING - ON / OFF** , **COOLING / VENTILATION** , **VENTILATION FAN SPEED ADJUSTMENT**, **TEMPERATURE AND RELATIVE HUMIDITY DISPLAY / ADJUSTMENT**.


The panel contains logic which enables several functions necessary for good operation of the cooling unit. Periodic panel washing and end-of cycle rinsing. These functions are essential to maintain optimum working conditions of the cooling unit.





6.3.1 Command and signal descriptions


6.3.1.1 Command descriptions





 Pressed for more than 1 second, switches the cooling unit on or off. Pressed once during setting On/off periods, exits the menu. Pressed once during modifying default parameters, exits the menu. Pressed for more than 3 seconds, when the control unit is locked, temporary unlocks. In the OFF position, the Display shows: "OFF". (the panel is always powered-on)

 Pressed once, selects fan speed (F1, F2, F3...) or automatic operation (FA)


 Pressed once, selects programming mode to display or set operating periods / automatic shutdown.


 Pressed for more than 1 second selects operating mode: Cooling ON (manual), Cooling AUTO (automatic), Ventilation ON (manual), Ventilation AUTO (automatic). Pressed during programming, selects automatic operating conditions (ON / OFF) for the period


 If time is displaying, sets the current day. Pressed once during programming operations, selects the days of the programme being set.

 
 Pressed till display shows 'time' displays current time. Pressing the    buttons

enables the user to set the day, hour and minute values.


 If time is displayed, sets the current hour. Pressed once during On/Off periods setting, changes hours. Pressed once during modifying default parameters, increases the value. Pressed once after pressing **FAN** command, increases fan speed and/or disables automatic fan speed. Pressed for more than 2 seconds together with **M** command, changes the default parameters.

 If time is displayed, sets the current minutes. Pressed once during On/Off periods setting, changes minutes. Pressed once during modifying default parameters, decreases the value. Pressed once after pressing **FAN** command, decreases fan speed and/or disables automatic fan speed. Pressed for more than 2 seconds together with **H** command, changes default parameters.







 Pressed once, shows the temperature detected.

 Pressed once, shows the humidity detected.


In both cases, pressed for more than 5 seconds until "SET" is displayed, allows the user to set the relative humidity.

Use the   buttons to increase or decrease the value.


6.3.1.2 Signal Descriptions

	The led indicates if the timer (Automatic programme) is in On or Off
	The led indicates that the unit is working in manual cooling mode.
	The led indicates that the unit is working in automatic cooling mode (depending on the programme set)
	The led indicates that the unit is working in manual ventilation mode.
	The led indicates that the unit is working in automatic vent mode (depending on the programme set)
day 1-7	When the led is on, the day of the week is shown: 1= Monday
	Blinks during modifying values or parameters.
OFF	Unit off. Attention: the panel is always powered-on.
FAn	Ventilation mode only.
P-00	STARTING COOLING - Waits for the drain valve to close and turns the water pump on.
P-01	COOLING.
P-02	DRAIN
CIn	SELF CLEANING
StOP	End of program - oFF period
LOC	Control unit locked
--:--	Free space in memory
--	Temperature and humidity probe disconnected
En	Communication doesn't work properly. Check wiring connections.
EE	Eeprom failure. Try to power off and on again.
EA	TIME OUT filling or draining tank failure. Try to power off and on again. If error reoccurs, maintenance maybe required.
Etc	Clock error. The time on the remote controller is not set. Set current time.

6.4 Switching ON


Press the  button for more than 2 seconds, until the time is displayed.

6.5 Switching OFF


Press the  button for more than 2 seconds, until the display shows "oFF".

6.6 Starting mode

6.6.1 Manual start mode

With the unit switched on, press the  button several times until the led goes on the corresponding operation mode required:


6.6.2 Automatic start mode


With the unit switched on, press the  button several times until the led goes on the corresponding operation mode required:


Cooling  ON Ventilation  ON


6.7 Settings


6.7.1 Setting current time


Press the  button for more than 2 seconds until display shows "timE".


Release the key, display shows the current time for approx 5 seconds or until the  button is pressed.

At any time the time menu is activated, the  symbol is displayed.


Use the  button to set the day of the week. ie 1 = Monday, 2 = Tuesday , 7 = Sunday.


Use the  button to set the current hour.


Use the  button to set the current minute.

Press the  button to return or wait five seconds.

6.7.2 Setting On/Off periods




 
 

Press the  button several times until display shows "PR9".



Release the key, display shows the first program position "--:--" and the  symbol is displayed.


Use the  button to set the day or multiple days required.

Use the  and  buttons to set the ON and OFF times required.



Press the  button to set the mode:


- Led  on = Cooling
-  Led  on = Ventilation
-  Led  on = unit ON
- Led  off = unit OFF


To save the program and advance to the next program, press the  button. If you want to exit without saving, press the  button or wait 30 seconds.

To exit the program settings, press the  Button or wait 30 seconds.



6.7.3 Reading a stored program.


Press the  and the display shows the first programmed position along with the  symbol

Further presses of the  button will display other programmes stored.


To exit the program settings, press the  Button or wait 30 seconds.

6.7.4 Modifying a program.



Press the  and the display shows the first programmed position along with the  symbol


Press the  button to select the program to be altered. Refer to section 6.7.2 settings.


To save changes press the  button.


To exit the program settings, press the  Button or wait 30 seconds.


6.7.5 Deleting a stored program.

Press the  and the display shows the first programmed position along with the  symbol

Press the  button to select the program to be deleted.



To delete a selected program, press and hold the  button until the display changes to "--:--"

To delete all stored programmes, press and hold the  button until the display changes to "EALL"


To exit the program settings, press the  Button or wait 30 seconds.



6.7.6 Changing the Temperature and Humidity values

**Factory setting: Temperature : 26 °C
Relative humidity: 75%**


Press and hold the  button until "SP" is displayed (then release the key). The display shows the set point along with the  symbol.

Use the  &  buttons to increase or decrease the value.

To save changes press the  button or wait 10 seconds.

Press and hold the  button until "SP" is displayed (then release the key). The display shows the set point along with the  symbol.

Use the  &  buttons to increase or decrease the value.










To save changes press the  button or wait 10 seconds.


6.7.7 Locking/unlocking remote control unit.

It is possible to lock the remote control unit to avoid unauthorised tampering


To lock the remote command unit the **HL** parameter value must be changed.

Modify as follows:

- Press and hold the  &  buttons until display shows **PA**.
- Press the  button twice.
- Press the  or  buttons to locate the HL parameter.
- Press the  button to view the current set value.
- Press the   buttons to alter the set value.
- Press the  button again to go back.

To save changes press the  button or wait 30 seconds.


When the remote control is locked, display shows “**Loc**” when pressing any key.



To temporary unlock the remote control, keep the  button pressed until display shows “**oFF**”

The remote control returns automatically to locked status after 15 seconds.


6.8 Operating mode

6.8.1 Cooling

Press the  button to choose the cooling mode required:

- (manual) 
ON
- (automatic) 
AUTO

If the probe detects a humidity value more than 5% of the set value, the unit goes in ventilation mode (cooling stand-by) If the probe detects a humidity value less than the set value, the unit automatically reverts to cooling mode.

It's possible to set the air flow by altering the fan speed by pressing the  button

It's also possible to set automatic speed function **FA**


To guarantee longer life of the pads, the evaporative refreshes the tank's water every 4 hours (factory default). In addition, the pads go through a self cleaning cycle when the machine is switched off.



Every 4 hours, the unit automatically alters to cooling stand-by (ventilation mode). It drains water from its tank and re-fills it with fresh water, then reverts back to cooling mode. (Elapsing time between the tank's water change can be modified depending on environmental conditions and/or kind of water inlet. To make this change it's necessary to call the after-sales service).


When the evaporative cooler is switched off, the unit automatically starts a pads self clearing cycle lasting 10 minutes. During which time, it drains water from its tank and re-fills it with fresh water, performs a water re-circulation through the pads (ventilation off) to remove residual salts and other kind of dirtiness.



At the end of cycle the machine drains the water from the tank.



6.8.2 Ventilation

Press the  button to choose the ventilation mode required:

- (manual) 
ON
- (automatic) 
AUTO

Press the  button to display the current fan speed.

Press the  or  buttons to set the fan speed desired or the automatic speed function “**AUTO**”

To save the changes and exit press the  or  buttons or wait 1 second.

Air flow during automatic speed function (**FA**) depends on the set temperature value and the temperature value detected by the probe. If the probe detects a temperature value higher than the set value, the fan will start on higher speed until the set temperature is reached. Upon the fan will automatically revert to a lower speed. If the temperature increases, the fan goes on higher speed.

6.9 Operating faults

If during normal operation of the unit, the “EA” code appears on the control panel, it could be that either foreign bodies (e.g.: leaves, etc.) have accumulated around the discharge valve blocking the evacuation of the water, or that the level switch is faulty.

In order to reset the error, remove power from the unit. If the error code reappears on returning power to the unit, contact the installer or the after sales service.

If water drips continuously through overflow holes during normal operation, it is probably due to a faulty level switch. Contact the installer or after sales service.

In both cases it would be best to:

- Shutdown the plant:

- Cut-off electrical power;
- Close the water tap;
- Get in touch with the installer or a qualified technician.

6.10 Bus system

Certain models have an on-board printed circuit that allows to have a BUS System connection called CBS or a single command control system called CABS. The CBS system can be controlled by a P.C. and can control up to 58 units. The CABS System can control groups of 5 unit controlled by a single remote command. It is possible to have these systems implemented even after the cooling system is installed.

For further information, please contact AmbiRad Ltd.

7. Maintenance.

7.1 End-of-Season Maintenance

At the end of each season, it is recommended that the following precautions be taken to make sure the system operates efficiently at the start of the following season.

- Cut-off power to the unit using the main isolator-switch.
- Close off the water supply.
- Drain the water supply pipe work to avoid bursts due to icing.
- Remove the machine cover.
- Check that the water channels are clean

and that there are no obstructions in the water supply and distributor in the upper part of the unit. Clean any debris in the water riser.

- Delicately and fully clean the base of the unit. Use a mild detergent, not a solvent as it may react with plastic materials.
- Remount the cover and make sure it is fixed securely using the bolts supplied.
- Apply the protection cover over the unit making sure that it has no holes or damage, if damage is detected, repair the cover or replace.



It is very important that the protection cover is applied to the evaporative cooler at the end of the season, this avoids the machine from being damaged by climatic factors during the set-aside period; smog, acid rain , ice, etc.

7.2 Pre-Season Maintenance

We recommend annual service to the system to maintain it in perfect operating conditions.

- Cut-off power to the unit using the main isolator switch.
- Remove the protection cover and check for any damage that may have occurred. Clean the cover with mild detergent and put into storage.
- Remove the unit cover

- If necessary clean the base.
- TC models: check the tightness of the belt (*) – (see sect 6.2.2). When damaged it must be changed.
- Check the evaporative pads and clean them thoroughly using water. Replace where necessary.
- Check that waterways are clean and that there are no obstructions in the water supply and distributor in the upper part of the unit. Clean any debris in the water pump.

- Turn the machine on by the main isolator switch.
- Turn on the water supply. Start the system in COOLING mode and check that the discharge valve is closed and that the tank fills up with water until the inlet valve stops.
- Check that the water is distributed evenly on all evaporative pads.
- Check that the discharge valve is working

properly; make sure that it opens within 5 minutes after having pressed the OFF key.

- Check for any water leaks.
- Check cables conditions.
- Replace and fix well the machine top using the bolts supplied.

(*) During working season, it is advisable to check it monthly.



Before carrying out any maintenance operations, carefully read this section of the manual. For any necessity, contact Technical Assistance Service. The manufactures are not responsible for any damage or malfunctions due to lack of maintenance as described in this section.

7.3 Maintenance Safety Regulations

7.3.1 Clothing

Maintenance personnel must wear suitable clothing and PPE.

Before machine start-up the equipment should be checked to make sure it is working correctly, so that any maintenance or repairs necessary can be carried out before the operating period.



The manufacturer does not assume any responsibility or is liable for any guarantee; due to damage caused by not abiding to instructions, any non compliant installations and inappropriate use of the equipment by the end user.

During maintenance operations, barrier off the working area in compliance with H & S regulations.

date, time, type of service undertaken and the name of the person.

Record and log all maintenance carried out on an appropriate register, making sure to state the

If any cleaning solvents are used, make sure to avoid damage to electrical cables.



Personnel that use any solvents must be equipped with individual protection (safety glasses, filter masks, gloves) suitable for contact with the solvent used. When using solvents under no circumstance smoke or use open flames. After use, ventilate the building to extract any residual vapours.



Under no circumstance:

Leave any flammable materials near to electrical panels.

Work on the electrical equipment without isolating the equipment from the power supply lines.

Work on any part of the unit before the plant has come to a stop.

Operate the equipment with the safety systems deactivated or removed.

Deactivate or evade the alarm signals.

Ignore the warning signals and signs fixed to the machine

Operate the unit with the metallic protections removed.

7.3.2 Unit Warnings



DANGER: Risk of electric shock



MOVING MACHINERY

7.3.4 Residual risks



When the plant is operating, do not touch the fan – Mechanical danger. Under NO circumstance should any work be undertaken on moving parts.



Electrocution danger - It is forbidden to use water to clean electro-mechanical components



UNDER NO CIRCUMSTANCE USE WATER TO PUT OUT FIRES

7.4 Technical Assistance

For any technical assistance required, contact the installer or if necessary contact:

AmbiRad Ltd Technical Assistance on...

Telephone 01384 489700
Facsimile 01384 489707
Email info@ambirad.co.uk
Website www.ambirad.co.uk

Or check out our technical website at:

Technical Support www.s-i-d.co.uk

8. Dismantling.

8.1 Disposal

In the case of dismantling and disposal of the plant, all material of the plant must be collected

and sent to the appropriate collection and disposal centres of companies specialized in the disposal sector.



Dismantling of the plant must be carried out by specialized personnel, equipped with suitable equipment and personal individual protection. Do not smoke and do not use open flames.

Nortek Global HVAC (UK) Ltd
Fens Pool Avenue
Brierley Hill
West Midlands DY5 1QA
United Kingdom

Tel: 01384 489250
Fax: 01384 489707

ambiradsales@nortek.com
www.ambirad.co.uk

**NORTEK**TM
GLOBAL HVAC

AMBIRAD AIRBLOC NORDAIRNICHE BENSON

Registered in England No. 1390934. Registered office: 10 Norwich Street, London, EC4A 1BD

Nortek Global HVAC is a registered trademark of Nortek Global HVAC Limited. Because of continuous product innovation, Nortek Global HVAC reserves the right to change product specification without due notice.