COMBUSTION AIR CONVERSION INSTRUCTIONS

Applies to: Gas-Fired, Tubular, Radiant,

Low-Intensity Infrared Heater



FOR YOUR SAFETY

If you smell gas:

- 1. Open windows.
- 2. Don't touch electrical switches.
- 3. Extinguish any open flame.
- 4. Immediately call your gas supplier.

FOR YOUR SAFETY

The use and storage of gasoline or other flammable vapors and liquids in open containers in the vicinity of this appliance is hazardous.

WARNING: Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury or death. Read the installation, operation, and maintenance instructions thoroughly before installing or servicing this equipment.

WARNING: Gas-fired appliances are not designed for use in hazardous atmospheres containing flammable vapors or combustible dust, in atmospheres containing chlorinated or halogenated hydrocarbons, or in applications with airborne silicone substances.



Any unused components supplied with the fresh air inlet conversion kits need to be disposed of accordingly as not all parts supplied are required.

There are two different fresh air inlet plates, one has three fixing holes and one has four fixing holes (see table). Follow the relevant procedure for the type of fan fitted to the appliance being converted.

	Fresh Air Inlet Plate Type							
Size	60	80	100	125	150	170	200	
VPS 3 Hole	*	*	*	*	*	*		
VPS 4 Hole	iiii						*	
VPT	Already fitted (kit inlet plates not needed)							
VCS/VCT	Already fitted (no inlet plate in kit)							

VPS/VPT CONVERSION KIT PART NUMBER 270613						
Part No.	Description	Quantity				
270426	5mm dia x 10mm long screw	3				
269916	4 hole fresh air inlet plate	1				
269913	3 hole fresh air inlet plate	1				
270422	Hose clamp 90-120mm	2				
270462	Flexible hose 108mm dia x 350mm long	1				
270688	Combustion air conversion manual	1				

VCS/VCT CONVERSION KIT PART NUMBER 270614						
Part No.	Description	Quantity				
270435	5mm dia x 16mm long stainless steel screw	3				
270423	Stainless steel hose clamp 90-120mm	2				
270462	Flexible hose 108mm dia x 350mm long	1				
270688	Combustion air conversion manual	1				

Section 1 VPS Three Fixing Fan Procedure

Step 1: Using an 8mm wrench remove the nuts securing the fan orifice plate.



Step 2: Do **not** remove the orifice plate. Attach the fresh air inlet plate over the fan studs and refasten with the original nuts, making sure not to cross thread the fan stud fixings.



Section 2 VPS Four Fixing Fan Procedure

Step 1: Using a No.2 cross head screwdriver, remove the four screws securing the fan orifice plate.



Step 2: Do **not** remove the orifice plate. Attach the fresh air inlet plate on top of the orifice plate and refasten with the original screws, making sure not to cross thread the fan fixings.



Hose Connection

Step 3: After attaching the fresh air inlet plate, connect the flexible hose. Using a No. 2 flat screwdriver, tighten the hose clamp screw to make a secure connection. Re-commission the burner to ensure correct operation.



For details of fresh air ductwork to the exterior please refer to the appropriate instruction manual for the heater being converted.



Section 3

VPT Hose Connection

Connect the flexible hose. Using a No. 2 flat screwdriver tighten the hose clamp screw to make a secure connection. Re-commission the burner to ensure correct operation.





Any unused components supplied with the fresh air Inlet conversion kits need to be disposed of accordingly as not all parts supplied are required.



For details of fresh air ductwork to the exterior please refer to the appropriate instruction manual for the heater being converted.



Section 4

VCS/VCT Hose Connection

Connect the flexible hose. Using a No. 2 flat screwdriver tighten the hose clamp screw to make a secure connection. Re-commission the burner to ensure correct operation.



Any unused components supplied with the fresh air Inlet conversion kits need to be disposed of accordingly as not all parts supplied are required.



For details of fresh air ductwork to the exterior please refer to the appropriate main instruction manual for the heater being converted





Specifications & illustrations subject to change without notice or incurring obligations. ©2014 All rights reserved. All marks are the property of their respective organizations. O'Fallon, MO | Printed in U.S.A. (09/14) 248E-0914 Form: I-VC/VP-OA